

Operating manual

EN
Original

MU-L/VS

Edition	05.2016
From series	2013
Reference number	MU-L-VS_BA_13_2013_EN



www.muething.com
www.shop.muething.com


Muething
GmbH & Co. KG

Machine identification

In order for your dealer to assist you as efficiently as possible, you will need to provide some information about your machine.

Please enter the information here.

Designation

Working width

Weight

Machine number

Additional equipment

Dealer's address

Manufacturer's address

Müthing GmbH & Co KG Soest
Am Silberg 23
59494 Soest
Germany

Handover declaration

- Fill out this sheet with your dealer.
- Then separate this sheet from the operating manual and send it to the manufacturer within 10 days of delivery. Only in this way will the guarantee be effective from the date of delivery

To
Müthing GmbH & Co KG
Am Silberg 23
59494 Soest
Germany

I have bought the machine described below from Müthing GmbH & Co KG, Soest, and confirm full delivery and handover of the machine including the operating manual and replacement parts list, as well as training in operating the devices with safety and warning instructions from your sales partner.

I confirm additionally that I have read and understood the operating manual and am in agreement with the information contained therein. This applies in particular to the chapter Safety.

Client

Last name		First name	
Address			
Post code		Town/city	
Telephone		Fax	
E-mail		Date	

Machine

Machine	MU-	Serial number	
Working width		Gear box	
Rigid mounting		Non-rigid mounting	
Year of construction		Delivery date	
Delivered by			

Signature of client

Signature and stamp of sales partner

Handover declaration

Handover declaration – Copy

– This sheet remains with the client in the operating manual

I have bought the machine described below from Müthing GmbH & Co KG, Soest, and confirm full delivery and handover of the machine including the operating manual and replacement parts list, as well as training in operating the devices with safety and warning instructions from your sales partner.

I confirm additionally that I have read and understood the operating manual and am in agreement with the information contained therein. This applies in particular to the chapter Safety.

Client

Last name		First name	
Address			
Post code		Town/city	
Telephone		Fax	
E-mail		Date	

Machine

Machine	MU-	Serial number	
Working width		Gear box	
Rigid mounting		Non-rigid mounting	
Year of construction		Delivery date	
Delivered by			

Signature of client

Signature and stamp of sales partner

Handover declaration	3	Maintenance	47
Handover declaration – Copy	5	For your safety	47
About this operating manual	8	General information	48
Target group	8	Maintenance intervals and setting work	51
Safety	8	Lubricating work	52
Training	8	PTO shaft	54
Other applicable documents	8	Gearbox oil	55
Symbols	9	Tools	57
Safety	10	V-belt	58
For your safety	10	Runners	60
Warning signs	10	Additional equipment	61
Definitions	13	Lighting equipment	61
Who is allowed to operate the machine?	13	Wear insert	61
Coupling	14	Counter cutter	61
Centre of gravity	15	Wide-angle PTO shaft	62
Road transport	17	Operating hours counter	62
Putting the machine into operation	17	Fault elimination	63
Uncoupling the machine	19	Disposal of the machine	65
Care and maintenance	19	EC Declaration of Conformity	66
Further regulations	20	EC Directive	
Familiarising yourself with the machine .	21	2006/42/EC	66
Range of application of the machine	21	Index	67
Features of the machine	22		
Designation of components	23		
Technical specifications	24		
Delivery and assembly	26		
Checking the scope of delivery	26		
Coupling the machine	27		
Coupling the tractor	27		
Hydraulics	30		
Electrics	30		
Preparation	31		
Working depth	31		
Driving on the road	32		
Traction cable	33		
Lighting equipment [+]	34		
Transport without coupling	34		
Mulching	35		
Work position	35		
Task	38		
Cleaning and care	42		
Cleaning	42		
Care	42		
Parking and storage	43		
Setting down the machine in a secure position	43		
Storing the machine	46		

About this operating manual

Target group

This operating manual is intended for trained farmers and individuals who are otherwise qualified to perform agricultural activities and who have received instruction in the operation of this machinery.

Safety

Familiarise yourself with the contents of this operating manual which are relevant for your activity before commissioning or assembling the machine. Always read through the safety instructions in the chapter "Safety" and observe the warning information in the individual chapters. In this way, you will achieve optimum work results and operational safety.

For the employer:

Staff must be instructed in the safe handling of the machine before the initial commissioning. Untrained or unauthorised persons are not permitted to use the machine.

The following are included in this training:

- Checking that staff possess the necessary requirements for safely handling the machine.
- Handing out the operating manual and the other relevant and applicable documents or an intensive course of training which, in particular, includes the safe handling of the machine.

Regular instruction sessions

Instruct your staff regularly, but at least once year, concerning the basic procedural measures for safely handling the machine.

Training

You will receive training from your dealership concerning using the controls, safe operation and care of the machine. Commissioning without first receiving training is not permitted.

Other applicable documents

In addition to the operating manual, other documents also form an integral part of the machine:

EC Declaration of Conformity	Integral part of this operating manual → Chapter »EC Declaration of Conformity«, page 66.
Spare parts list	Integral part of the delivery with this machine
PTO shaft operating manual	Integral part of the delivery with this machine

Symbols

In order to make this manual clear and easy to read, we have used various symbols. They are explained below:

- A bullet point accompanies each item in a list
- ▶ A triangle indicates operating functions which must be performed
- An arrow indicates a cross-reference to other sections of this manual
- [+] A plus sign indicates an accessory that is not included in the standard version.

Pictograms

We have also used pictograms to help you find instructions more quickly:



The warning triangle indicates warning information. Failure to observe these safety instructions can result in:

- Moderate to serious injury
- Fatal injury

You will find the warning information associated with individual operations, where it is important to observe the warning information before these operations are carried out.

You will also find safety instructions in the chapter »Safety« which cannot be assigned to any particular operations, but increase your ability to work safely in different situations.



This sign indicates important instructions regarding the machine. Failure to observe these safety instructions can result in:

- Serious faults in the correct operation of the machine.
- Damage to the machine.



This symbol indicates information, tips and instructions about operation.



This symbol indicates tips for assembly or adjustment work.



This symbol indicates examples that help you to understand the instructions better.

Parts in the text which refer to individual machines or to conditions have a coloured background. After the coloured section, the text then applies again to all machines. For example:

Only for MU-Farmer/S with pneumatic brake system

- ▶ Connect brake hoses
- ▶ Connect hydraulic hoses

For your safety

This chapter contains general safety instructions. Each chapter of the operating manual contains additional warning instructions which are not described here. Observe the safety instructions:

- in the interest of your own safety,
- in the interest of the safety of others
- to ensure the safety of the machine


Numerous risks can result from handling agricultural machinery in the wrong way. Therefore, always work with particular care and never under time pressure.

For the employer:

Inform personnel working with the machine of these safety instructions at regular intervals and according to statutory regulations.

Warning signs

On the machine you will find labels that serve to ensure your safety. The labels must not be removed. If labels become illegible or begin to peel off, new labels can be ordered and attached in the appropriate places.

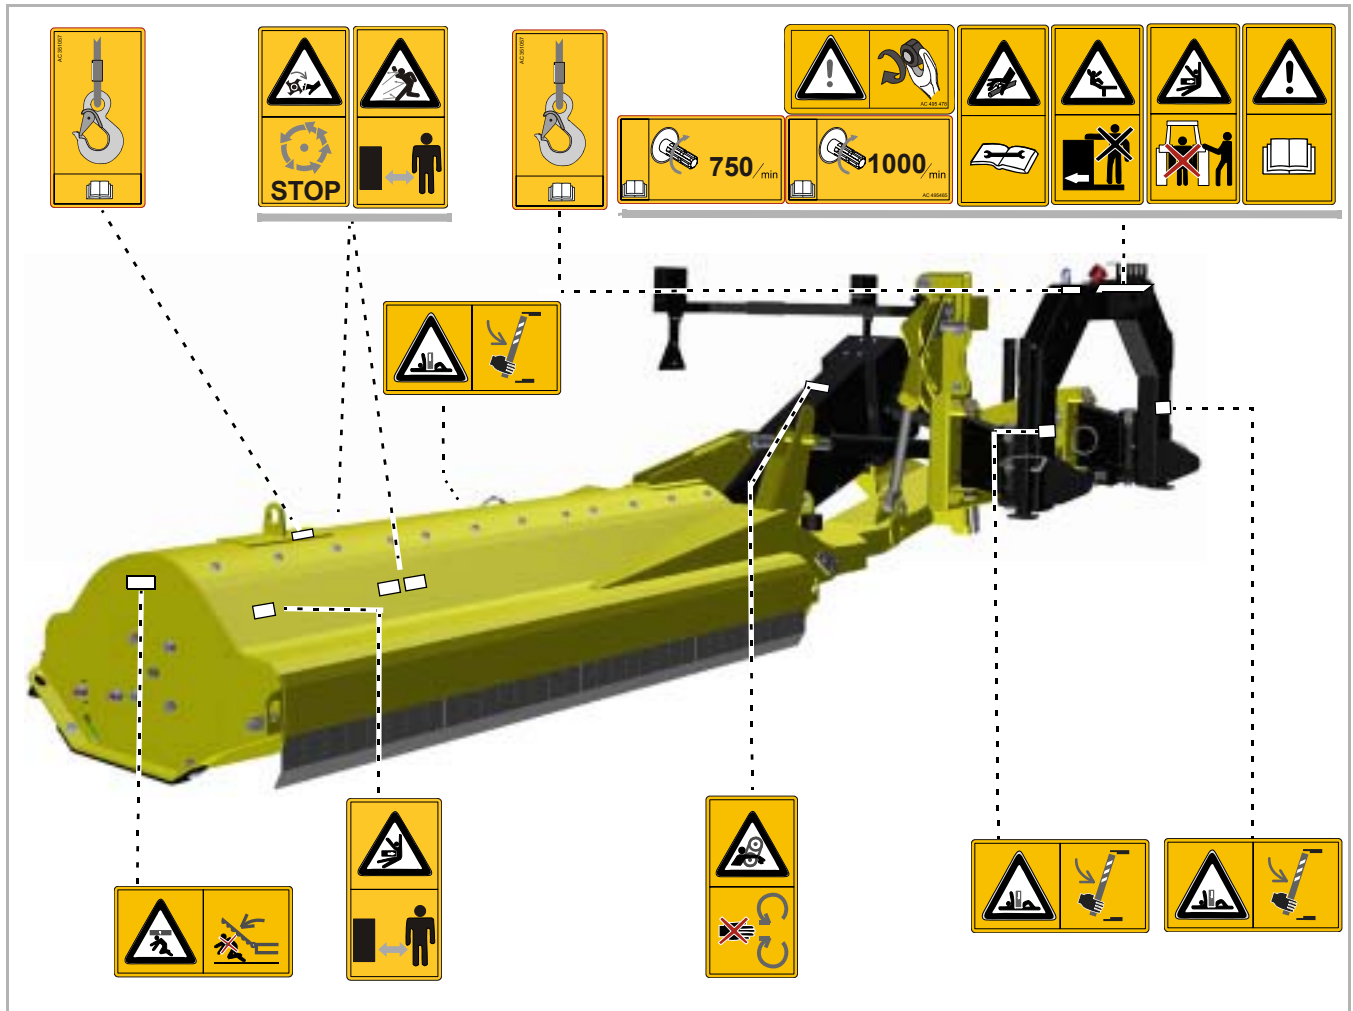

Meaning of warning signs



Read the operating manual carefully and follow the instructions
Commissioning of the machine must not take place before the operating manual has been read and understood. This particularly applies to safety instructions.



Do not stand between the tractor and the machine
Standing between the tractor and the machine with the engine running is prohibited, especially during coupling and uncoupling. The tractor must be additionally secured against rolling away.



Riding on the machine is prohibited
It can result in serious or even fatal injury.



Proceed with great care in the event of leaking hydraulic fluid
Do not look for leakage points without correct protection. Fine oil jets could penetrate eyes and skin under high pressure. Observe the corresponding safety instructions in the operating manual.



Do not remove protective devices
Never open or remove the protective devices while the tractor's engine is running. Never operate the machine without the protective device.



Be aware of the danger of being pulled in
There is a danger of being pulled into the PTO shaft in the event of inappropriate use.



Shackles or attachment points
Only raise the machine using loading equipment at the points indicated.



Rotating and trailing machine parts

Only approach the machine when all machine parts have stopped moving.



Danger of objects being thrown out

During operation, there is a danger of objects such as stones being picked up and thrown out by the machine. Ensure that no persons are present in the hazard area.



Danger from moving machine parts

Nobody is permitted to remain within the hazard area during operation.



 
Caution, risk of tipping

The machine or parts can tip over. Attach the safety supports before you stand in the hazard area. To uncouple, use the struts provided and position on firm ground.




Do not stand in the slewing range

There is an extreme risk of injury within the slewing range from slewing or folding machine parts.



Check the rotational speed of the PTO stub shaft

 Connect PTO shaft to a PTO stub shaft with an appropriate rpm. Always switch off the PTO stub shaft when working on the machine.




Retighten screws

After the first hours of operation, and as required, all screws must be checked and tightened if necessary. Vibrations might have loosened the screwed connections.

Definitions

All direction information is given in relation to the direction of travel of the machine:

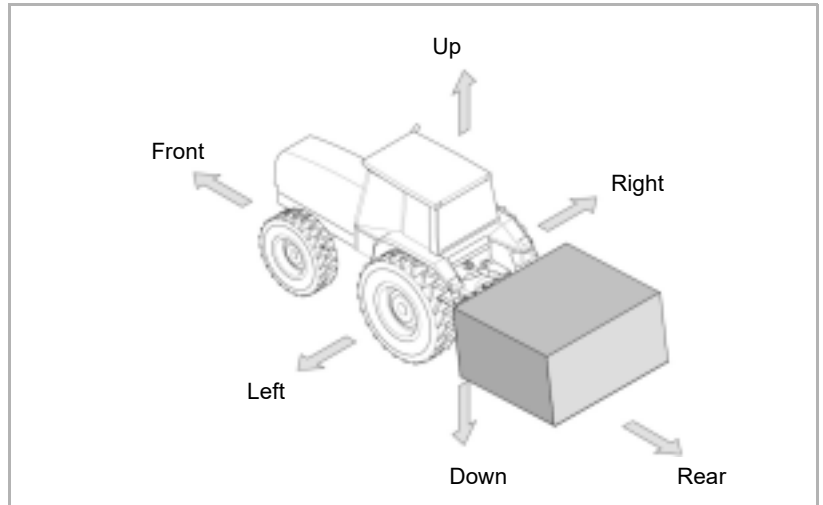

Who is allowed to operate the machine?

Only qualified personnel

Only qualified persons who have been informed of the dangers associated with handling the machine are permitted to operate, service or repair the machine. As a rule, such persons are trained and experienced in agricultural work or have been thoroughly trained in a similar fashion.

Coupling

Increased risk of injury

When the machine is being coupled to the tractor, there is an increased risk of injury. Therefore:

- Only couple the machine with the road chassis raised
- Secure the tractor against rolling away
- The tractor and machine must belong to the same category
- Never stand between the tractor and the machine during coupling
- Actuate the three-point power lift system slowly and carefully

Failure to observe these instructions can result in serious or fatal injury.

Connect electric wires or cables only after mounting the attachment

The electrical supply to the tractor must not be connected when the lighting equipment is being fitted. Short circuits and damage to the electronics are possible.

Only connect hydraulics at zero pressure

Only connect hydraulic hoses to the tractor hydraulic system if the tractor and machine hydraulic system is at zero pressure. A hydraulic system under pressure can trigger unpredictable machine movements.

High pressures in the hydraulic system

The hydraulic system is under high pressure. Regularly check all lines, tubes and screwed connections for leaks and externally visible damage. Only use suitable tools when looking for leaks. Rectify any damage immediately. Oil escaping under pressure may result in injuries and fires. In the event of injuries, seek medical attention immediately.

Colour-coded hydraulic hoses

To prevent operating errors, plug sockets and plugs for hydraulic connections between the tractor and the machine must be colour-coded. Wrongly connected hydraulic hoses can trigger unpredictable movements of the machine.

Centre of gravity

Observe the total weight, axle loads, tyre load-bearing capacity and minimum ballast specifications

The front or rear mounting of machines must not cause the tractor's permissible total weight, its permissible axle load or its tyre load-bearing capacity to be exceeded. In order for steering capability to be maintained, the front axle must bear at least 20 % of the tractor's empty weight.

By investing some effort in making the calculations it is possible to determine the:



- Total weight
- Axle loads
- Tyre load-bearing capacity and
- Minimum ballast

For this calculation, the following data is required:

Data from the tractor's operating manual:

- (A) unladen weight
- (B) front axle load
- (C) rear axle load

Please take into consideration, for example, the weight of water in the tyres, accessories, etc.

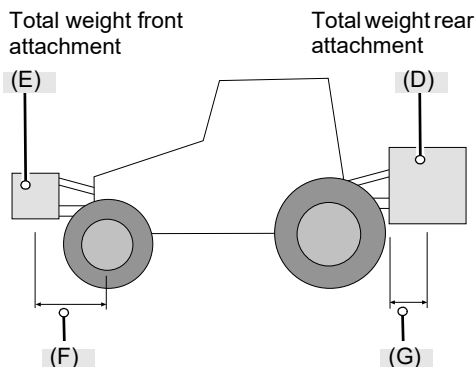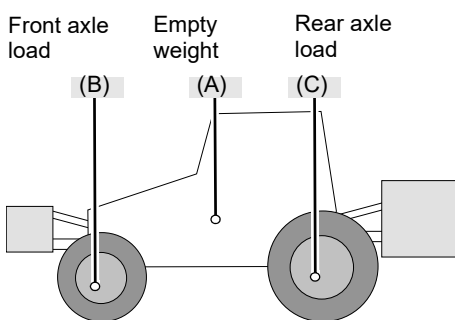


Clearance:
between centre of gravity in front attachment and front axle midpoint

Clearance:
between lower link ball midpoint and centre of gravity in rear attachment

Data from this operating manual:

- (D) total weight of the machine when rear-mounted; the supporting load with the machines attached
- (E) total weight of the machine when front-mounted
- (F) distance between the machine's centre of gravity when front-mounted and the front-axle midpoint
- (G) distance between the lower link ball midpoint and the machine's centre of gravity when rear-mounted. With machines attached, $G=0$.

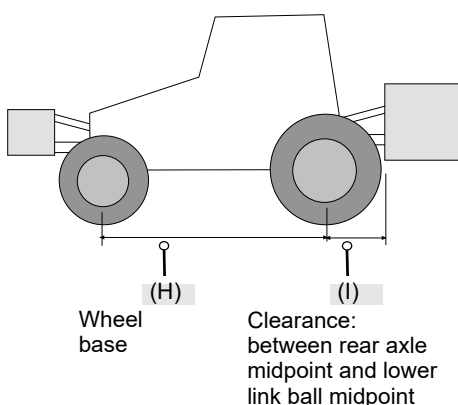

Wheel base

Clearance:
between rear axle midpoint and lower link ball midpoint

Data which you can determine by measuring:

- (H) the tractor's wheel base
- (I) distance between the rear axle midpoint and the lower link ball midpoint

Calculation

The measured values can now be inserted into the formulae.

Ballast with front weights

Calculation of the **ballast with front weights** for rear-mounted machines.

$$\text{Front ballast in kg} = \frac{D \times (I + G) - (B \times H) + (0,2 \times A \times H)}{F + H}$$

Ballast with rear weights

Calculation of the **ballast with rear weights** for front-mounted machines.

$$\text{Rear ballast in kg} = \frac{(E \times F) - (C \times H) + (0,45 \times A \times H)}{H + I + G}$$

Front axle load

Calculating the **actual front axle load**

$$\text{Front axle load in kg} = \frac{E \times (F + H) + (B \times H) - D \times (I + G)}{H}$$

Total weight

Calculation of **actual total weight**

$$\text{Total weight} = E + A + D$$

Rear axle load

Calculating the **actual rear axle load**

$$\text{Rear axle load in kg} = \text{actual total weight} - \text{actual front axle load}$$

Tyre load-bearing capacity

Data on the tyre load-bearing capacity of the front and rear wheels can be found in the tyre manufacturer's documentation.

- The front tyre load-bearing capacity for two wheels is equal to twice the permissible tyre load-bearing capacity of a single front wheel.
- The rear tyre load-bearing capacity for two wheels is equal to twice the permissible tyre load-bearing capacity of a single rear wheel.

Summary

Check if the following conditions are met:

- The actual values for the rear axle load must be less than the permissible values given in the tractor's operating manual.
- The tyre load-bearing capacity must be greater than the values for the rear axle load given in the operating manual.
- The actual total weight must be less than the permissible total weight given in the tractor's operating manual.

If these conditions are not met, the machine must not be attached to this tractor.



If you have a sufficiently large weigh-bridge, you can determine the total weight and the rear axle load by weighing.

Road transport

Make sure that the condition of the machine conforms to traffic regulations

The machine must conform to current traffic regulations if you intend to drive it on public roads. This includes for example:

- Lighting, warning and protective equipment must be fitted
- The permissible transport width and weight, axle load, tyre load-bearing capacity and total weight are observed

The driver and owner of the vehicle are liable if traffic regulations are not observed.

Closing ball valves

If ball valves are provided on the hydraulic lines or the chassis cylinders, the ball valves must be closed for road transport. Accidental actuation of control devices on the tractor might otherwise cause movements in the machine. Accidents or damage to the machine may be caused as a result.

Check release cable for the quick-release coupling

Release cables must hang loose and must not, when in their lowered position, release the couplings of their own accord. Attached machines might otherwise come loose from the three-point linkage of their own accord.

Riding on the machine is strictly prohibited

People or objects must never be transported on the machine. Riding on the machine poses a risk to life and limb and is strictly prohibited.

Take the change in driving and braking performance into account

Driving and braking performance is altered when the machine is attached to the tractor. Take the width and balancing weight of the machine into consideration, especially when cornering. A driving style which not adjusted to the road conditions can lead to accidents.

Drive at a suitable speed

Always adjust your driving speed to the road conditions. Driving at excessive speeds in poor road conditions may create extremely large forces, which will severely load or overload the tractor and the machine. Driving at unsuitable speeds can cause machine damage and lead to accidents.

Putting the machine into operation

Training required before commissioning

The machine must not be put into operation until the user has been given proper training by an employee of the dealer, a factory representative, or an employee of the manufacturer. Commissioning without training can lead to damage to the machine due to false operation or accidents can happen.

Ensure that the machine is in perfect working condition

Do not operate the machine unless it is in perfect working condition. Check all important components and replace any defective components before starting the machine. Defective components can cause damage to equipment and personal injury.

Do not remove the protective equipment

The protective equipment must not be removed or by-passed. Check all protective equipment before starting the machine. Unprotected machine parts can cause serious or fatal injury.

Riding on the machine is strictly prohibited

People or objects must never be transported on the machine. Riding on the machine poses a risk to life and limb and is strictly prohibited.

Height of the machine and overhead power lines

If a height of 4.00 m is exceeded when folding the machine in and out, the machine must not be folded in the vicinity of live overhead power lines. Danger of electrocution! Should the machine come into contact with a live overhead power line:

- Do not attempt to exit the tractor cabin
- Do not touch any metal parts on the tractor
- Do not create any conductive contact with the ground
- Warn all persons in the area not to approach the tractor or the machine
- Wait for help from professional emergency service personnel as power in the live overhead power line must first be switched off

Never climb onto the machine beneath live overhead power lines. The voltage can jump across even if the lines are not actually touching the machine.

Check the hazard area

The hazard area in front of and behind the machine is 8 m, while it is 2 m at the sides. Before driving off, folding out, and operating the machine and during operation, check its hazard area. Make sure that you have an adequate view. Do not begin work until the hazard area is cleared of any persons or objects.

Parts could be ejected from the machine at high speed in certain circumstances. The hazard area, particularly in front of and behind the machine, must be cleared of any persons, animals or objects before starting.

Any use of the machine without verification of the hazard area can lead to serious or fatal accidents.

Retighten all nuts, bolts and screws

Nuts, bolts and screws should be checked at regular intervals and tightened if necessary. Screws can come loose unnoticed while operating. Damage to the machine or accidents may be caused as a result.

What to do in the event of a fault

In the event of a malfunction, shut down and secure the machine immediately. The fault may be eliminated immediately, or a specialist workshop must be assigned the task. Further operation of the machine can lead to damage to the machine or injury to persons.

Uncoupling the machine

Increased risk of injury

There is an increased risk of injury when uncoupling the machine from the tractor. Therefore:

- Secure the tractor against rolling away
- Never stand between the tractor and the machine during uncoupling
- Actuate the three-point power lift system slowly and carefully
- Make sure the machine is standing on a secure and level surface
- Do not disconnect hydraulic hoses until there is no pressure in the tractor and machine hydraulic system

Failure to observe these instructions can result in serious or fatal injury.

Care and maintenance

Observe the care and maintenance intervals

Observe prescribed intervals for maintenance checks and inspections specified in the operating manual. If these periods are not observed, this can lead to damage to the machine, poor quality of work or accidents.

Use replacement parts with identical properties

Many components have special properties that are essential for the stability and correct operation of the machine.

When replacing components, dimensions, stability and material quality must be guaranteed. We recommend the exclusive use of original replacement parts.

Use of replacement parts which do not correspond to requirements could cause damage to the machine or impaired performance.

When performing care and maintenance work:

- Switch off the PTO stub shaft
- Depressurise the hydraulic system
- Whenever possible, uncouple the tractor
- Make sure the machine is standing securely. Provide additional support as required
- Do not use parts of the machine as climbing aids; use only secure steps, ladders or other means of access
- Secure the machine against rolling away
- Never reach into the V-belt while it is moving

It is only possible to guarantee work safety during care or maintenance work through observing these regulations.

Turn off the electrical supply

Prior to carrying out work on the electrical system, disconnect the system from the power supply. Systems supplied with electrical power can cause damage to equipment and personal injury.

Replace hydraulic hoses

Replace hydraulic hoses every six years. Hydraulic hoses can age without any externally visible damage. Defect hydraulic lines can lead to severe or fatal injuries.

Caution when cleaning with a high-pressure cleaner

The machine can be cleaned using either water or a steam jet. Only use a low pressure to clean bearings, fans, signal mixer units, plastic parts and hydraulic hoses. Excessively high pressures can cause damage to these parts.

Before carrying out welding work, disconnect the battery and alternator

Before carrying out any electric welding work on the attached machine, disconnect the tractor battery and the alternator. This avoids damage to the electrical system.

Tighten all screwed connections

All screwed connections that are released during maintenance and repair work must now be retightened. Loose screwed connections can cause bolts to undo without you noticing during your work. As a result, machine parts can become detached. Severe injury to persons or damage to equipment can result.

Further regulations

Observe the regulations

In addition to these safety instructions, observe the following:

- Accident prevention regulations
- Generally recognised safety regulations, occupational health requirements and road traffic regulations
- Information and instructions in this operating manual
- Regulations relating to operation, maintenance and repair

Familiarising yourself with the machine

This chapter contains general information on your machine as well as information on:

- Range of application
- Features
- Designation of components
- Technical specifications

Range of application of the machine

The machine may only be used for its intended agricultural or associated purpose, depending on the type of tool with which it is equipped.

Tool	Purpose
Hammer flail	To cut grass, other growth or sections up to a maximum of 5 cm diameter
Triple Y-blade	As for hammer flail. Low power requirement.
M shackle blade	As for hammer flail. Reduced suction effect. Swerving movement possible, so advantageous on stony soil conditions.

Since the conditions of use are very varied, the user must pay particular attention to the machine's performance limits. The machine must be switched off immediately if there is any indication of overstress.

Proper use

The machine should only be used for the designated work as described in this operating manual. Any application other than or beyond this is considered improper use.

Examples of improper use:

- Transporting persons or objects
- Cutting of any products other than those specified or those of a similar nature

→ »Range of application of the machine«

- Transferring power to other objects
- Front attachment
- Working depths under 53 mm clearance from ground
- Any type of ground work
- Use of the machine in a position in which the tools do not point towards the ground, for example in a vertical position

The manufacturer and dealers are not liable for damage caused by improper use. The risk is borne solely by the user.

Familiarising yourself with the machine

Features of the machine

Robust housing in optimised form

The housing is particularly robust for heavy use and is designed in an optimised form.

Parallelogram [+]

The machine is equipped with a parallelogram so that the machine can be moved sideways, and this is operated hydraulically from the tractor.

Power transmission

Power is transmitted to a gear box via a PTO shaft. From there, the rotor is driven via V-belt.

Internal rotor storage

Internal rotor storage prevents accumulation of dirt and minimises wear.

Tools


The tools are manufactured using high-quality material. Optimal cutting is achieved in conjunction with the short cut tool.

Safety

The machine is constructed in accordance with EU regulations, for maximum possible safety of operation. The machine bears the CE mark.


Familiarising yourself with the machine

Designation of components

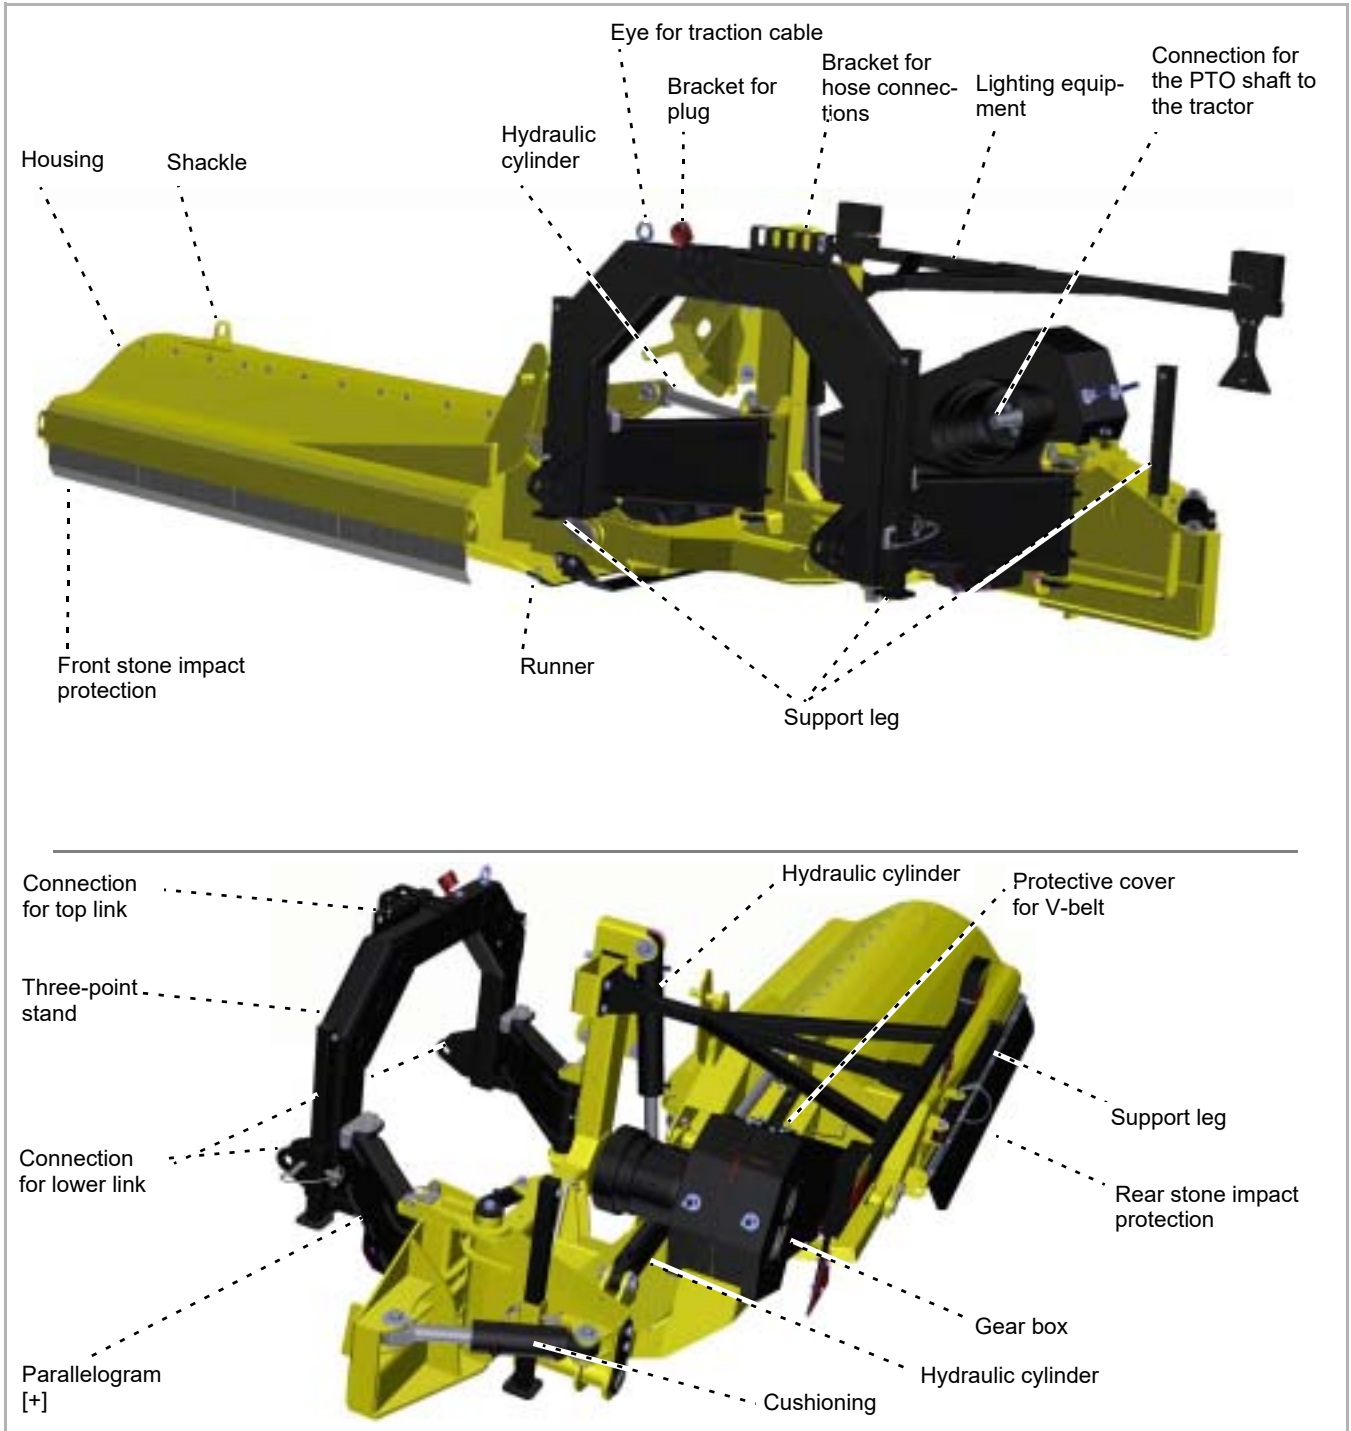

Familiarising yourself with the machine

Technical specifications

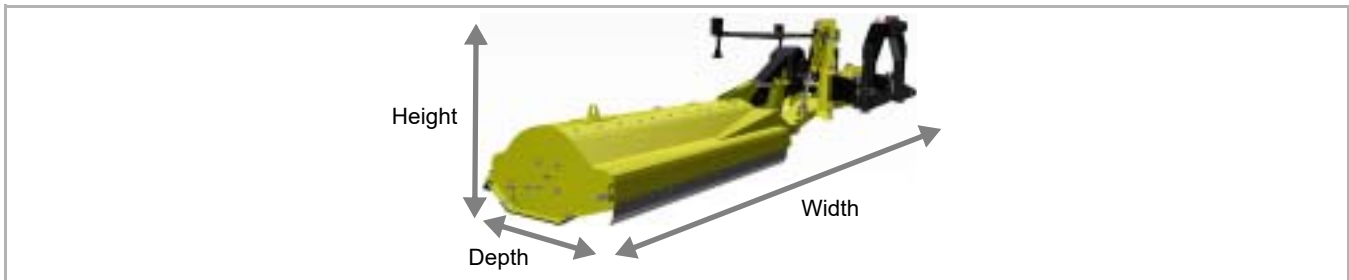

	MU-L/VS 160	MU-L/VS 180	MU-L/VS 200
Height (m)			
In work position	1.27	1.27	1.27
In transport position, 90°	2.40	2.60	2.80
Width (m)			
In work position	4.03	4.23	4.43
In transport position, 90°	2.20	2.20	2.20
Depth (m)			
In work position	1.52	1.52	1.52
In transport position	1.60	1.60	1.60
Working width (m)			
In work position	1.60	1.80	2.00
Total weight (kg)			
Depending on equipment level, approx.	1020	1050	1080
Centre of gravity (dimension G)			
Depending on equipment level, approx.	0.92	0.92	0.92
Rotational speed of rotor (rpm)			
PTO stub shaft 750 rpm	2350	2350	2350
PTO stub shaft 1000 rpm	2470	2470	2470
Power requirement (kW)			
Minimum	80	85	90
Maximum permitted	120	120	120
Tractor weight (kg)			
Minimum	3.500	3.700	3.900
Working depth (mm)			
Adjustable	48 / 71 / 90	48 / 71 / 90	48 / 71 / 90
Number of tools			
M-hammer flail	14	16	16
Y-blade	14	16	16
M shackle blade	32	36	40
Lubricants			
Gearbox oil	SAE 90 EP	SAE 90 EP	SAE 90 EP
Hydraulic oil	SAE 90 EP	SAE 90 EP	SAE 90 EP
Noise level (dbA)			
In the workplace, tractor with cab	< 75	< 75	< 75

Familiarising yourself with the machine

	MU-L/VS 160	MU-L/VS 180	MU-L/VS 200
Category			
Lower link category	II	II	II
Paint colours			
Yellow	RAL 1007	RAL 1007	RAL 1007
Black	RAL 9005	RAL 9005	RAL 9005
PTO shaft			
Model	GE2401 / GE2402	GE2401 / GE2402	GE2401 / GE2402

Delivery and assembly

Checking the scope of delivery

The machine is delivered completely assembled. If parts of the machine have not been assembled, please contact your dealer.



Do not assemble the machine yourself

Do not perform assembly work yourself since requirements for an orderly condition of the machine are :

- Observance of a sequence of worksteps
- Compliance with tolerances and torques

Incorrect assembly may result in damage to the machine or poor performance.



If parts are missing or have been damaged during transportation, please submit a claim immediately to your dealer, importer or the manufacturer.



Increased risk of injury

When the machine is being coupled to the tractor, there is an increased risk of injury. Therefore:

- Secure the tractor against rolling away
- The tractor and machine must belong to the same category
- Never stand between the tractor and the machine during coupling
- Actuate the three-point power lift system slowly and carefully


Failure to observe these instructions can result in serious or fatal injury.



Only attach the machine to the rear

The machine may only be attached to the rear of the tractor.
The machine could be damaged if front-mounted

Coupling the tractor

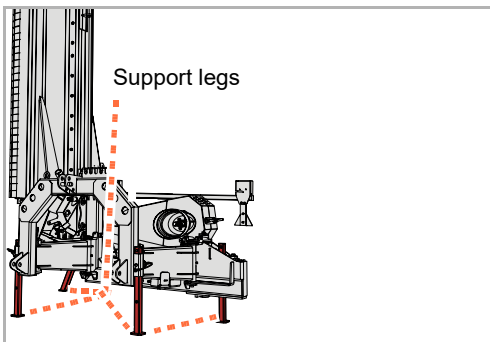


- ▶ Check whether the machine was securely positioned. The support legs have been lowered.

→ Chapter »Parking and storage«, section »Setting down the machine in a secure position«, page 43

If the machine is not securely positioned:

- ▶ Secure the machine with suitable lifting gear and move into the correct position

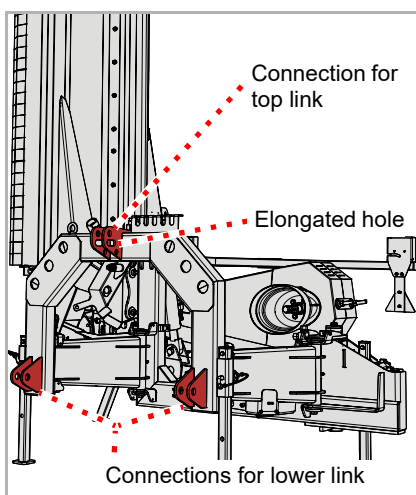


- ▶ Adjust both lower links on the tractor to the same height
- ▶ Attach the lower link in accordance with the category, and secure it with a pin and linchpin
- ▶ Attach the top link in accordance with the category, and secure it with a pin and linchpin




For transport, use the round holes in the connection for the top link. The elongated hole is designed for using the machine in the field.


Coupling the machine

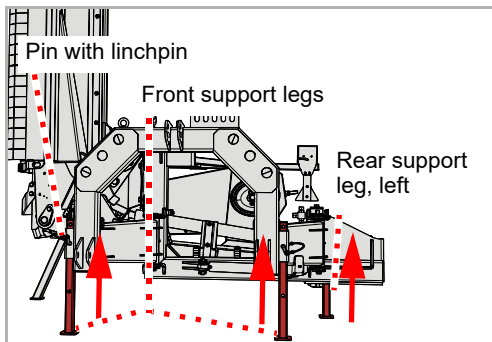

- ▶ Raise the machine slightly
- ▶ Release the pin and remove the pin from the front support leg
- ▶ Slide the front support legs and rear-left support leg upwards and use the pin to secure them in the top position
- ▶ Secure the pin

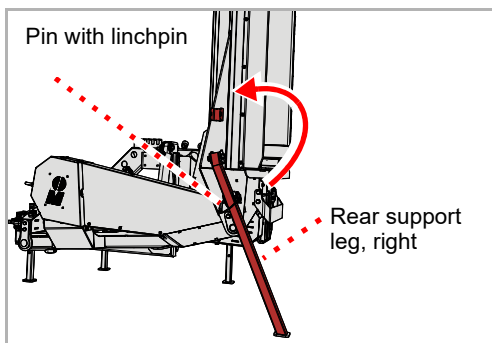

- ▶ Release the pin and remove the pin from the rear support leg
- ▶ Fold up the rear support leg and use the pin to secure it in the top position
- ▶ Secure the pin
- ▶ Adjust the lower link so that the machine has little play to the left or right

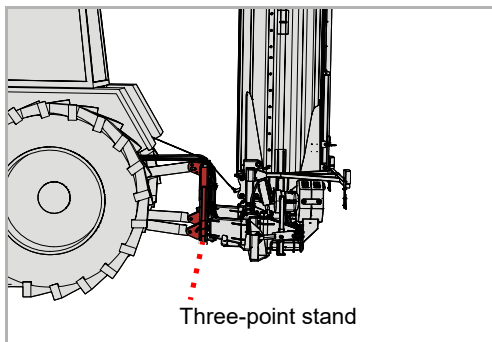


- ▶ Adjust the top link so that the three-point stand is vertical

PTO shaft

The PTO shaft has been adjusted to fit your tractor by your dealer.

Connection to the machine

Generally, the PTO shaft is already connected to the machine. If the PTO shaft is replaced or after maintenance work to the PTO shaft, it will be necessary to connect it to the machine.

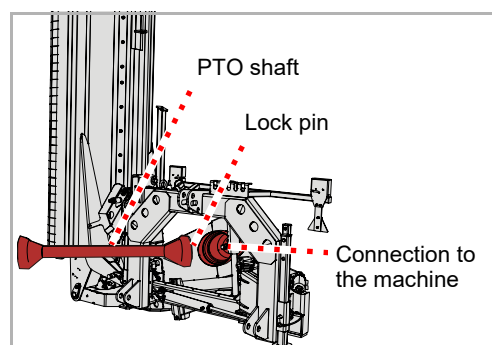


- ▶ Carefully clean and grease the PTO shaft and connection to the machine
- ▶ Push the PTO shaft onto the connection to the machine and ensure that the lock pin locks into place on the PTO shaft

Connection to the tractor



If the tractor is changed, the correct length of the PTO shaft must be checked. It is particularly important when checking the PTO shaft to ensure that the two halves of the PTO shaft continue to overlap at the position in which the PTO shaft is pulled apart furthest.

When changing the tractor, check that the PTO shaft is suitable for this tractor and if necessary, replace the PTO shaft and have it adjusted at a qualified specialist workshop.

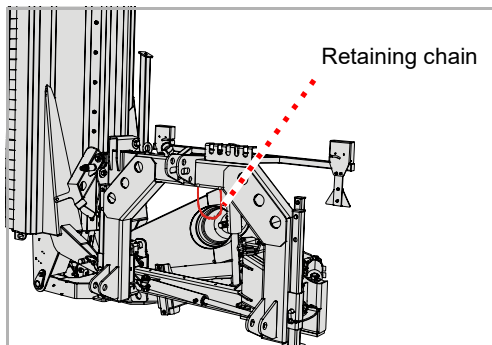


- ▶ Hold the PTO shaft and open the retaining chain
- ▶ Move the PTO shaft to one side and close the retaining chain again



Do not lay the attached PTO shaft in the retaining chain

The attached PTO shaft must not lay on the retaining chain.

A PTO shaft laying on the retaining chain will be damaged during road transport or when operating the lower link.

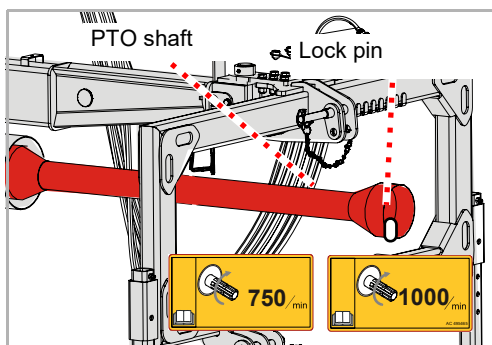


- ▶ Connect the PTO shaft to the PTO stub shaft of the tractor and ensure that the lock pin is locked in place on the PTO shaft
- ▶ Put the retaining chain back in place. The PTO shaft must not now be laying on the retaining chain.

Coupling the machine

Hydraulics

The following functions can be controlled:

Function	Control valve	Colour of dust cap
Moving the machine sideways [+]	Double-acting	Yellow
Moving the machine into the work position or the transport position.	Single-acting	Red
Tilting the machine	Single-acting	Blue

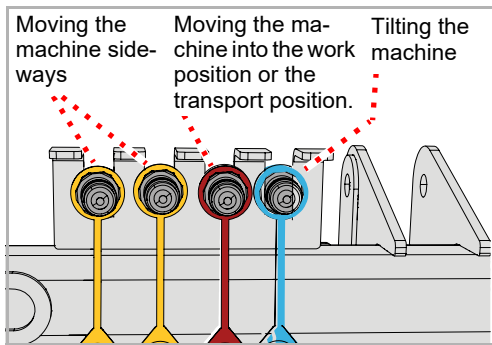

- ▶ Connecting the hydraulic hoses to one corresponding control valve each

Hydraulic load relief

→ Chapter »Mulching«, section »Hydraulic load relief«, page 40

Electrics

If present, attach the following plugs to the tractor for:

- The lighting equipment on the machine
- ▶ Check that the lighting equipment is working correctly

For indicators which are not signalling and are equipped with LEDs:



Depending on the tractor, the tractor's electrics may require re-grouping in the electrical cable's plug connection. Please contact your dealer in this case.

Working depth

The working depth can be adjusted in three stages. The optimal working depth for most applications is in the middle setting.



Tools must not come into contact with the ground


Any contact with the ground could result in stones or other material not being held back safely by the stone impact protection. *Persons even outside of the hazard area could be injured by ejected material.*




Do not go below the minimum working depth

The working depth must not be below the lowest setting. *Working depths below the lowest setting may result in the machine being damaged by excessive wear.*

- ▶ Position the machine on the runners
- ▶ Loosen bolt 1 on both sides of the roller and remove the bolt
- ▶ Loosen bolt 2

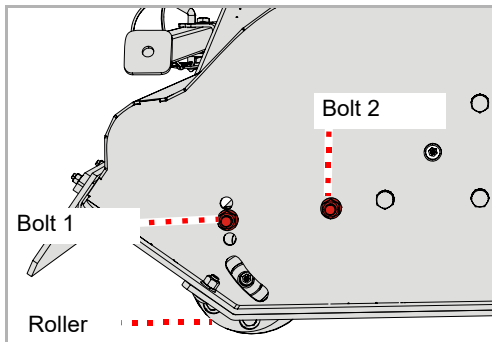


- ▶ Adjust the roller so that the opening is in the desired position
- ▶ Insert and tighten bolt 1 on both sides of the roller
- ▶ Re-tighten bolt 2 on both sides of the roller

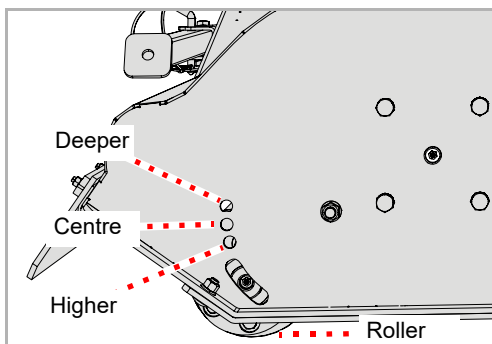

Driving on the road

For transporting the machine, it must be folded into the transport position after being coupled.

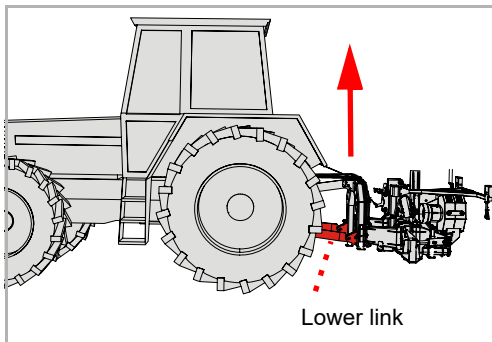

- ▶ Position the lower link over the three-point power lift of the tractor at a height which will enable the machine to be high enough for transport





Never switch on the PTO stub shaft in transport position

The PTO stub shaft must not be switched on in transport position. The tools must always be pointed towards the ground.


Tools that are not pointed towards the ground may eject parts or material at high speed. Persons even outside of the hazard area could be injured by ejected material.

Machines with parallelogram:

- ▶ Use the control device to move the machine to the left

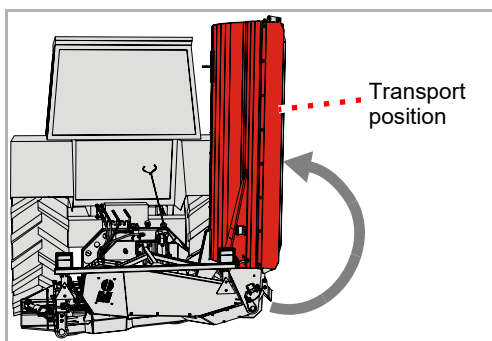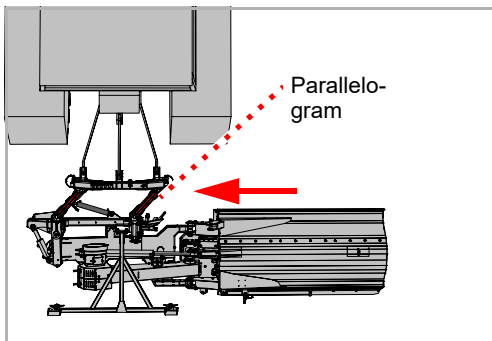

- ▶ Using the tractor's control device, fold the machine into the transport position

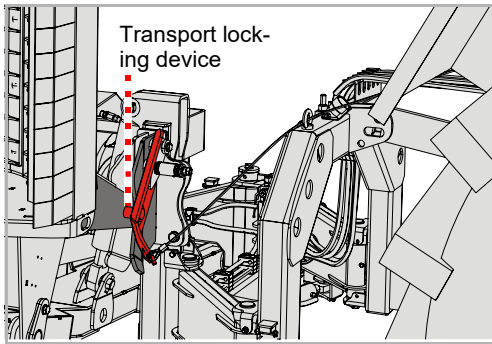

- ▶ In doing so, make sure that the transport locking device locks into place

If the transport locking device does not lock into place:

- ▶ Lower the machine slightly into the work position and bring it back to the transport position again



Securing the control devices

Prior to road transport, the control devices on the tractor must be secured against inadvertent actuation.

If the control devices are unsecured on the tractor, the machine could accidentally fold out into the work position during road transport. This can result in accidents.


Traction cable



The traction cable must lie loose

The traction cable must not be tensioned tightly.


A tightly tensioned traction cable leads to the transport locking device opening. The machine may then accidentally fold out into the work position.

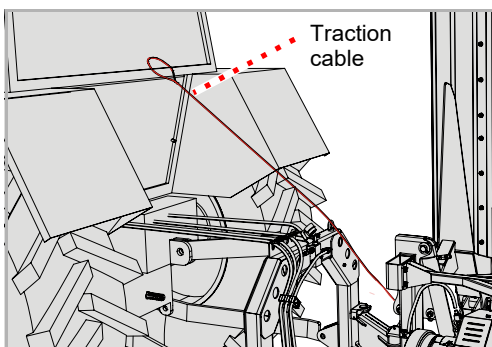

- ▶ Place the end of the traction cable in the tractor cab. In doing so, ensure that the traction cable is loose and remains without tension.


Driving on the road

Stop valves

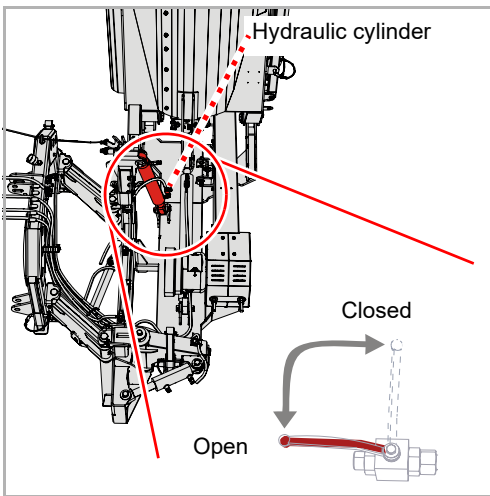

- ▶ Set the stop valve on the hydraulic cylinder to the "Closed" position


Lighting equipment [+]

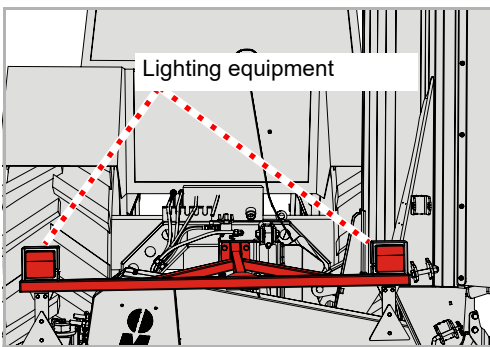

- ▶ Check lighting device for correct function


Transport without coupling

For transport on, for example, a trailer, the machine can be raised. Only use the designated points for attaching the lifting device. The machine must be securely positioned.

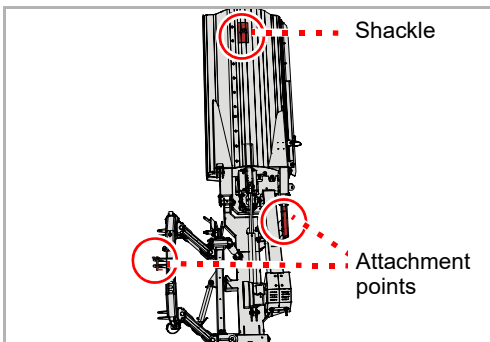

- ▶ Set down the machine in the work position
→ Chapter »Parking and storage«, section »Setting down the machine in a secure position«, page 43
- ▶ Attach suitable lifting devices to the shackles and to the attachment points
- ▶ Raise the machine with suitable lifting gear and position on the loading bed
- ▶ Secure the machine against slipping on the loading bed

Work position

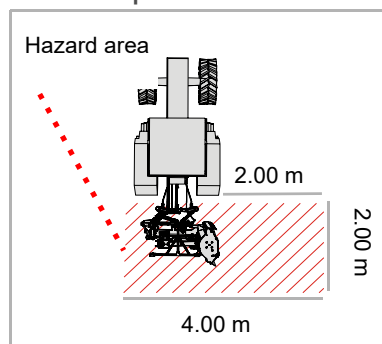

Check the hazard area


Before folding out the machine into the work position, check the hazard area. Make sure that you have an adequate view. Do not begin to fold it out into the work position until the hazard area is cleared of any persons or objects.

Folding out the machine without first checking the hazard area can lead to serious or fatal accidents.

The fold-out procedure is executed in several stages:

1. Open the stop valves
2. Fold out the machine into its work position
3. Swivel out the machine


1. Stop valves

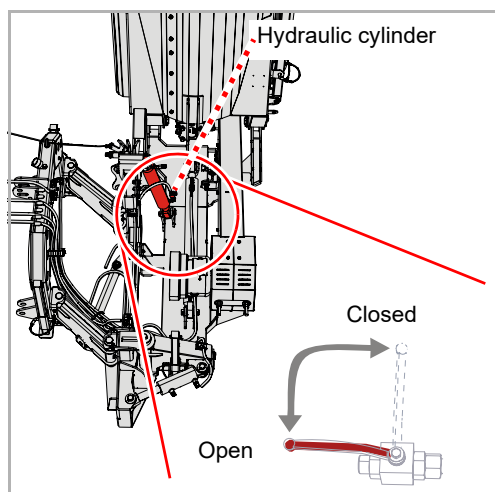


- ▶ Set the stop valve to the "Open" position on the hydraulic cylinder

Mulching

2. Work position

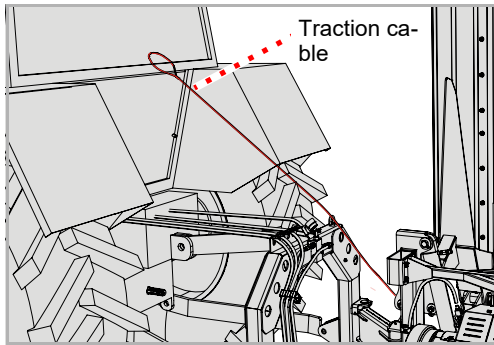

- ▶ Pull on the traction cable and loosen the transport locking device

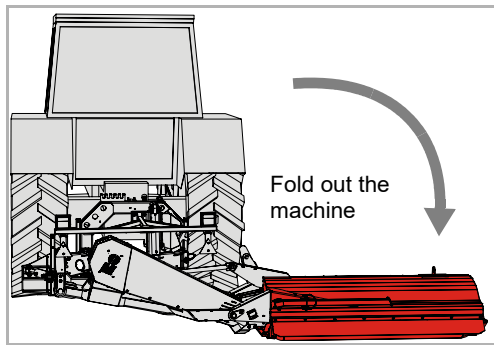

- ▶ Using the tractor's control device, fold out the machine into the work position

3. Swivelling out


The position of the machine behind the tractor can be adjusted. This means that the machine can either work directly next to the tractor track or near the tractor track with offset.




Do not swivel out when the machine is lowered.

When swivelling out, the machine must not be lowered to the ground.

If the machine is lowered to the ground when swivelling out, the machine will be damaged.

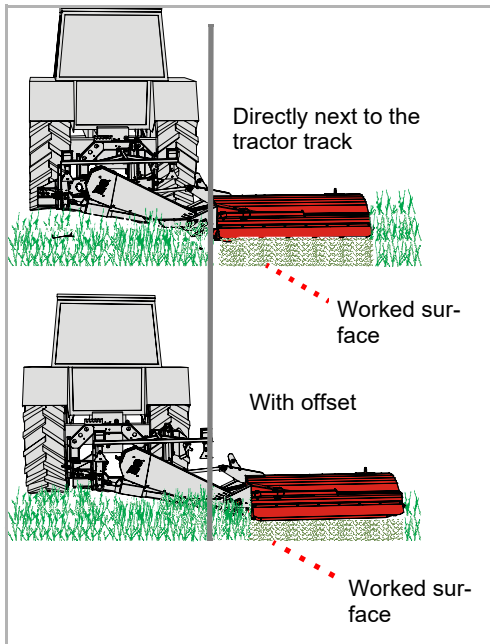


The choice of position depends on the work to be carried out.

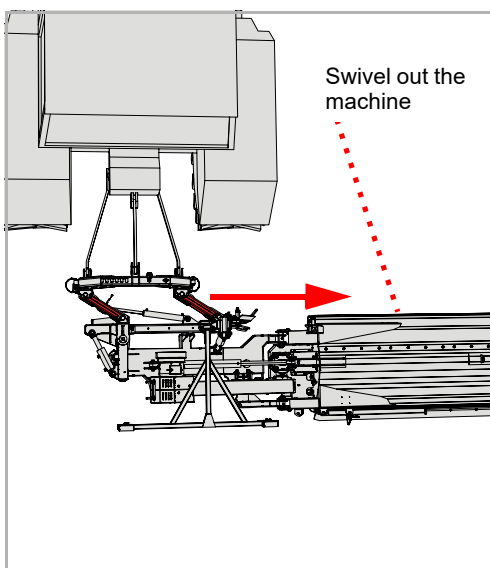

- Using the tractor's control device, swivel out the machine as required

Task

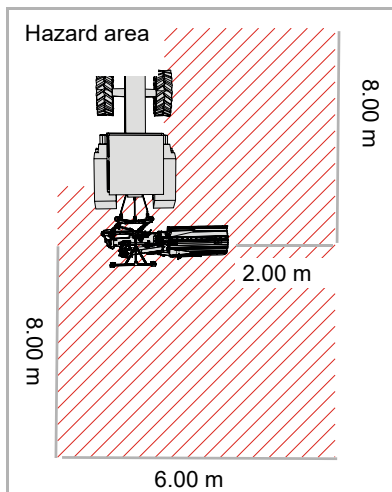

Check the hazard area

The hazard area in front of and behind the machine is 8 m, while it is 2 m at each of the sides. Before driving off, operating the machine and during operation, check its hazard area. Make sure that you have an adequate view. Do not begin work until the hazard area is cleared of any persons or objects.

Parts could be ejected from the machine at high speed in certain circumstances. The hazard area, particularly in front of and behind the machine, must be cleared of any persons, animals or objects before starting.

Any use of the machine without verification of the hazard area can lead to serious or fatal accidents.

Never switch on the PTO stub shaft in transport position

The PTO stub shaft must not be switched on in transport position. The tools must always be pointed towards the ground.

Tools that are not pointed towards the ground may eject parts or material at high speed. Persons even outside of the hazard area could be injured by ejected material.




Only work forwards

The machine may only be located in work position when moving forwards. The machine must be raised up when reversing.

A machine in work position when reversing could result in serious damage to the machine.


Particular care should be taken by the operator when working with the mulcher. Working on ditches, overhangs or slopes are activities which tend to be particularly hazardous. We can only give general instructions, the actual situation must be evaluated by the operator.

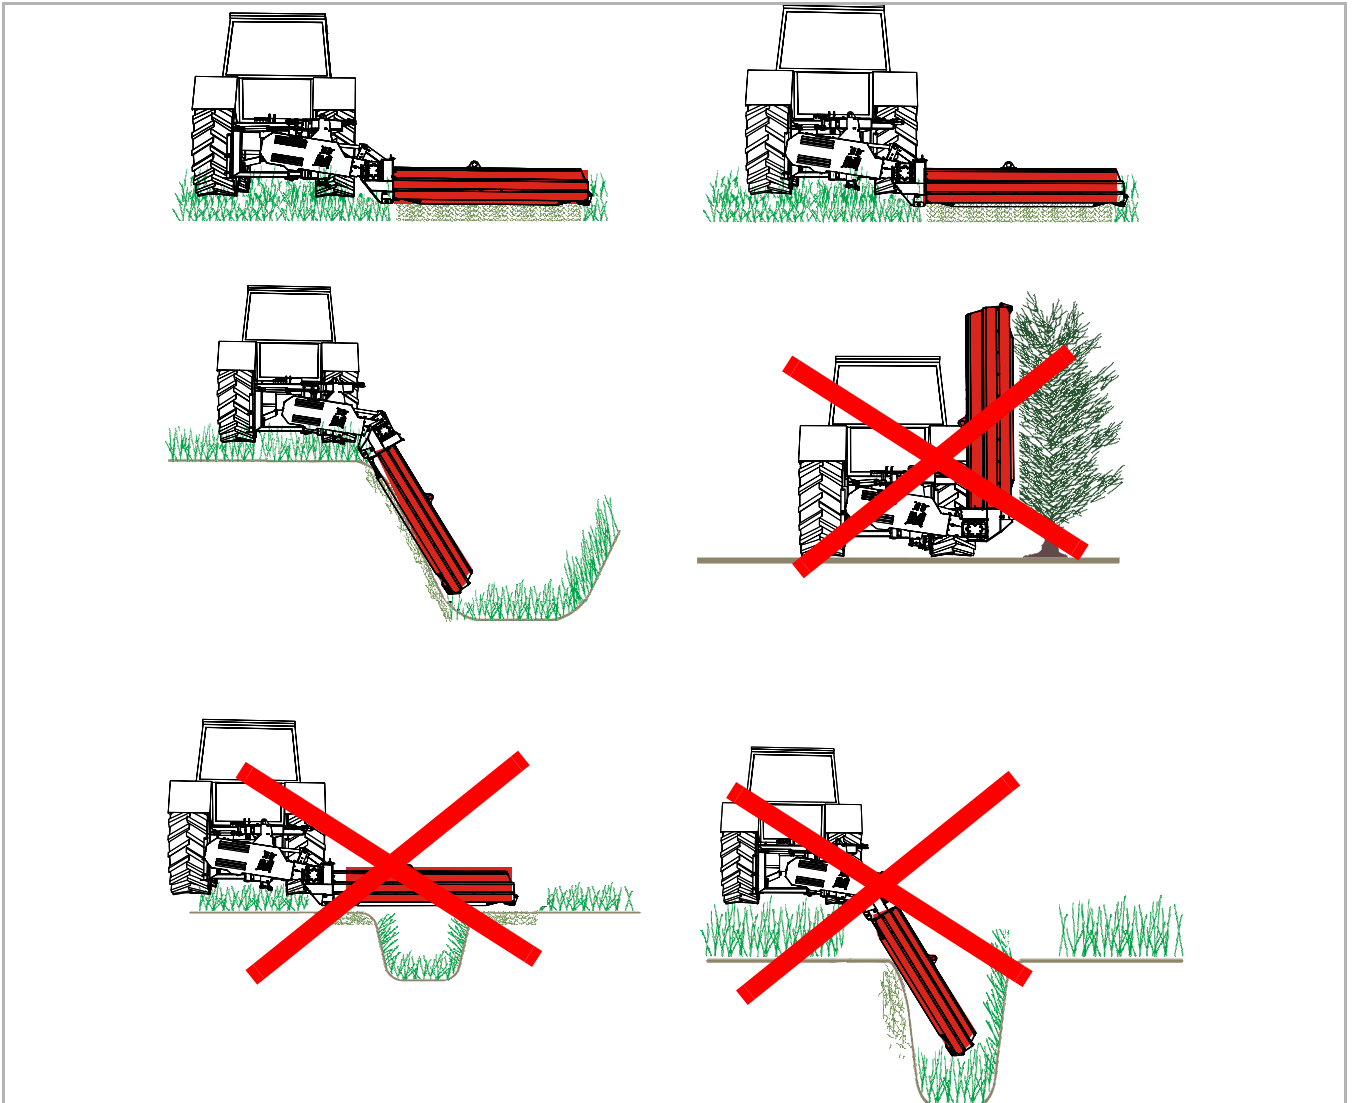

Mulching



Do not lean the machine forwards
The machine must not lean forwards when operating.
A machine that is leaning forwards could block and operate incorrectly.

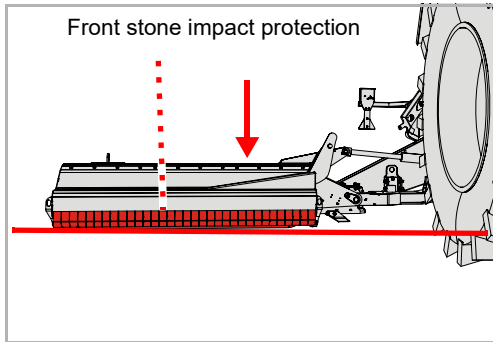


- ▶ Lower the machine using the lower links on the tractor until the machine is lowered to the ground. In doing so, the front stone impact protection should be parallel with the ground.
- ▶ Set the tractor's control device for the lower links to floating position

Hydraulic load relief


You can switch the hydraulic load relief on or off.

Aim	Position of the stop valve	Effect
Switch on	Open	The machine follows the ground contours at a slower speed and damped
Switch off	Closed	The machine follows the ground contours immediately and undamped

- ▶ Adjust the stop valve as desired

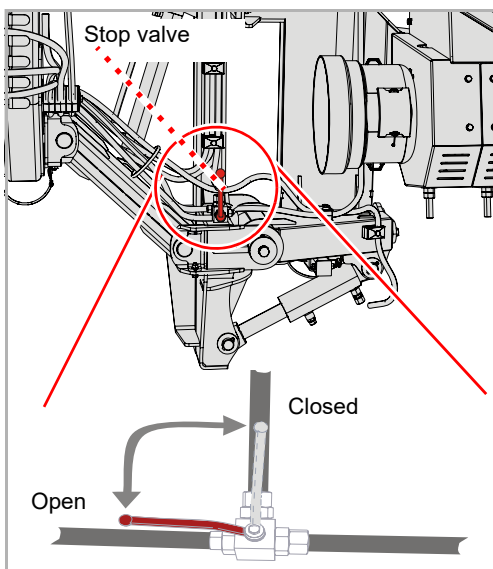

Switching on

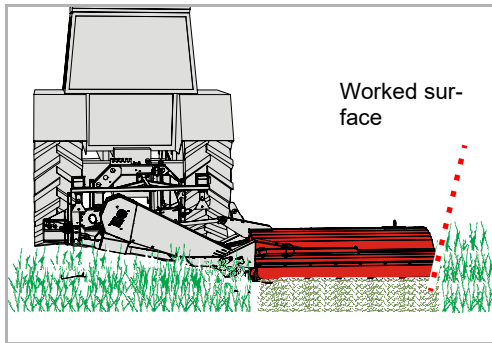

- ▶ Switch the PTO stub shaft into the work position and slowly bring the machine to the rated speed
- ▶ Then drive at low speed into the stock, increase speed slowly. Pay attention to the machine while doing this.

If the machine is working too hard:

- ▶ Reduce speed
- ▶ Drive at a suitable speed. The speed must be appropriate to the growth and the type of terrain.

Cleaning and care

Cleaning

A high-pressure cleaner, for example, can be used to clean the machine. Never point the water jet directly at the labels or type plate.



Only use low pressure to clean the bearings

Only use low pressure to clean the bearings.

The ingress of water shortens the service life of the bearings

Care

To ensure the machine's long service life, we recommend applying a protective coating of oil after the end of the season and during storage.



Use only approved and biodegradable oil, e.g. rapeseed oil.

Setting down the machine in a secure position

The machine can be set down while folded out or folded in.



Ensure that there are no unauthorised persons can enter the set-down location

If the machine is set down coupled or uncoupled on the tractor, the set-down location must be selected to ensure that no unauthorised persons can enter.

Persons could be injured by coming into contact with parts of the machine or by manipulating the machine.



Select the set-down location carefully

The set-down location must be relatively even and the ground must be solid.


Uneven or soft ground could result in the machine rolling away and becoming damaged.

Requirements on the set-down location:

- Horizontal, solid surface
- Sufficient room on all sides
- Protected against access by unauthorised persons, such as children

The machine is prepared for setting down in several stages:

1. Open stop valves
2. Fold out the machine into its work position
3. Disconnect electrical cables and hydraulic hoses from the tractor
4. Remove PTO shaft
5. Lower support legs
6. Remove top link, undo lower link

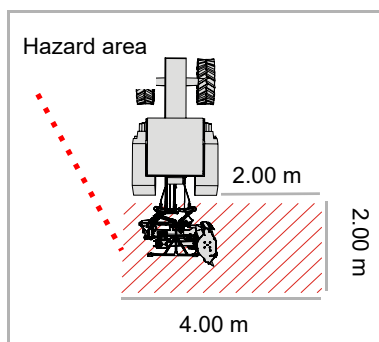


Check the hazard area

Before folding out the machine into the work position, check the hazard area. Make sure that you have an adequate view. Do not begin to fold it out into the work position until the hazard area is cleared of any persons or objects.

Folding out the machine without first checking the hazard area can lead to serious or fatal accidents.

Parking and storage


1. Stop valves

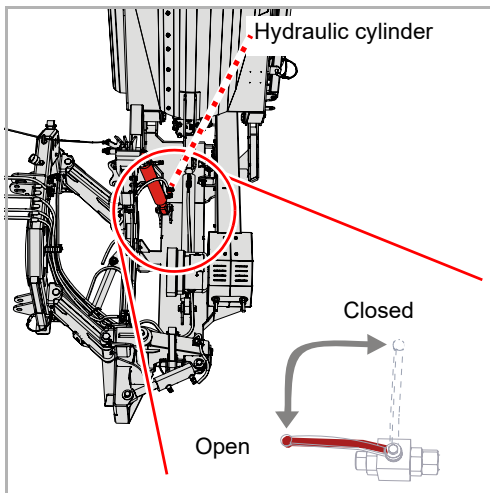


- ▶ Set the stop valve to the "Open" position on the hydraulic cylinder

2. Work position

The machine can be set down in the work position or in the transport position. If you want to set the machine down in the work position, you have to fold out the machine.

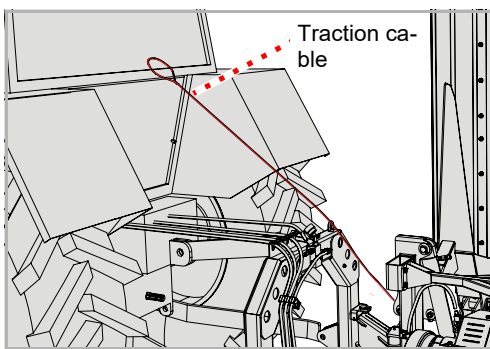

- ▶ Pull on the traction cable and loosen the transport locking device

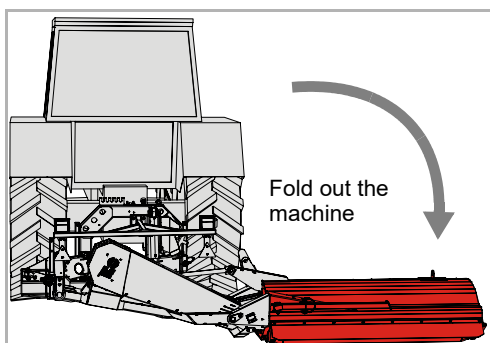

- ▶ Using the tractor's control device, fold out the machine into the work position

3. Electrics and hydraulics




Increased risk of injury

There is an increased risk of injury when uncoupling the machine from the tractor. Therefore:


- Secure the tractor against rolling away
- Never stand between the tractor and the machine during uncoupling
- Actuate the three-point power lift system slowly and carefully

Failure to observe these instructions can result in serious or fatal injury.

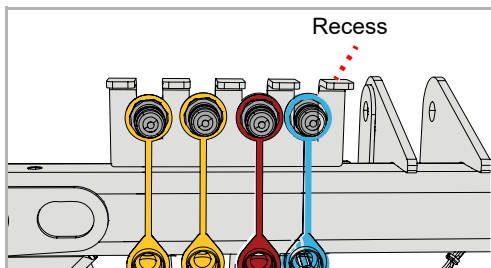

- ▶ . Disconnect electrical cables and hydraulic hoses from the tractor's connections
- ▶ Place plug connection on the recess


4. PTO shaft

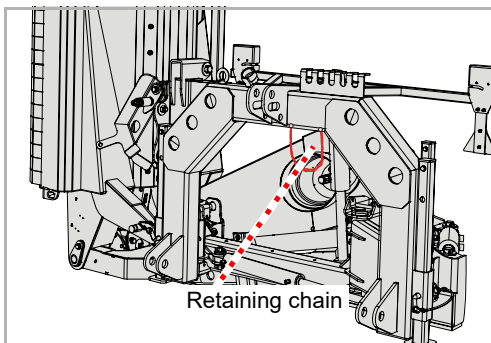


- ▶ Disconnect the PTO shaft from the tractor
- ▶ Open the retaining chain
- ▶ Lay the PTO shaft into the retaining chain and close the retaining chain again

Parking and storage

5. Support legs

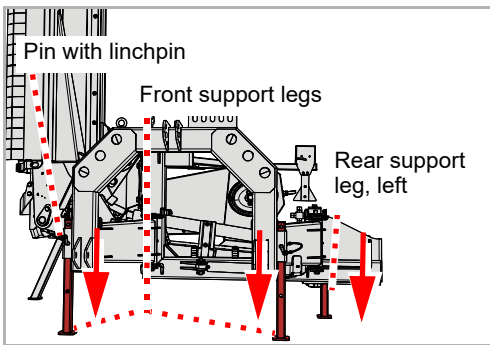

- ▶ Release the pin and remove the pin from the front support leg
- ▶ Lower the front support legs and rear-left support leg, and use the pin to secure them in the lower position
- ▶ Secure the pin

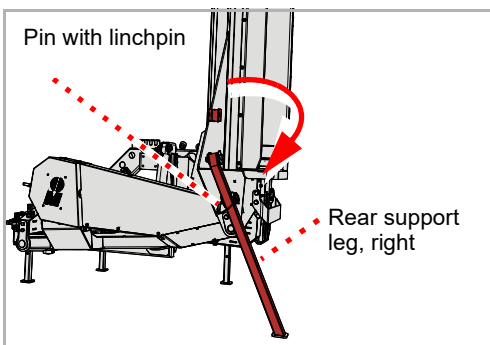

For machines that are set down in the transport position:

- ▶ Release the pin and remove the pin from the rear support leg
 - ▶ Fold the rear support leg downwards and use the pin to fix it in the lower position
 - ▶ Secure the pin
-
- ▶ Lower the lower link until the top link is no longer under compressive or tensile strain

6. Top link, lower link

- ▶ Remove the top link
- ▶ Undo the lower link and lower

The machine is now safely set down

Storing the machine

After cleaning, the machine should be stored in transport position in a dry location and on a level and stable surface.

→ Section »Setting down the machine in a secure position«, page 43



Apply a protective coating of oil during storage. Use only approved and biodegradable oil, e.g. rapeseed oil.

→ Chapter »Cleaning and care«, starting at page 42.

For your safety

Special safety instructions

**Requirements for conducting maintenance work**

Only perform the maintenance work if you have the required expert knowledge and suitable tools.

A lack of specialist knowledge or the use of unsuitable tools can cause accidents.

Protect the machine from being started up accidentally

If the machine is coupled, only carry out repair and maintenance work and only rectify malfunctions on it if:

- the PTO stub shaft is off,
- the engine is switched off,
- the ignition key is removed,

Serious accidents may be caused if the machine starts accidentally.

**Welding work**

Welding work may only be carried out by persons trained in welding who also have specialist knowledge of repairing agricultural machinery. Welding work which negatively impacts the machine's construction is prohibited.

Incorrect welding work could impair or destroy the machine's function. If in doubt, contact your dealer before carrying out any welding work.

Use replacement parts with identical properties

Many components have special properties that are essential for the stability and correct operation of the machine.

When replacing components, dimensions, stability and material quality must be guaranteed. We recommend the exclusive use of original replacement parts.

Use of replacement parts which do not correspond to requirements could cause damage to the machine or impaired performance.

Protective measures when handling oils or lubricants



Additives in oils and lubricants may have adverse effects on health. Since the hazardous material code does not require any special identification, please always observe the following:

Avoid skin contact

Avoid skin contact with these materials.

Contact can result in skin damage.

Protect your skin

When handling oils and lubricants, protect your skin with lotion or wear oil-resistant gloves.

Oils can be hazardous to your health.

Do not use oils for cleaning

Do not use oils or lubricants to clean your hands.

Swarf and abraded material in these materials can also result in injuries.

Change out of soiled clothing

Change out of clothing that is heavily soiled with oil as soon as possible.

Oils can be hazardous to your health.



- Collect old oil and dispose of it in accordance with statutory regulations.
- If your skin becomes irritated by oil or lubricants, contact a doctor immediately.

General information

This information relates to general maintenance work. For all maintenance work, the machine must be locked in the work position. If it is necessary to put the machine in its transport position for maintenance work, you will see an appropriate reference in the maintenance instructions.



Working with the grease gun:

One to two strokes with the grease gun are sufficient for lubrication. If you feel resistance during the second stroke of the grease gun, do not complete it.

Too much grease will force the bearings apart. This could allow dust and dirt to enter the bearing, resulting in premature wear.

Fundamentals

The following table contains a brief explanation of the most important terms used for maintenance.

Task	Explanation
Greasing	<ul style="list-style-type: none"> Apply grease to the slide surfaces using a brush
Lubrication	<ul style="list-style-type: none"> Unless specified otherwise, 1 or 2 strokes with the grease gun provide sufficient lubrication
Oiling	<ul style="list-style-type: none"> Unless otherwise specified, use only vegetable-based oil such as rapeseed oil Mineral oils are not suitable The use of used oil will endanger your health and is also strictly prohibited
Replacement	<ul style="list-style-type: none"> Replace the component in question according to the instructions in the »Maintenance« chapter
Check	<ul style="list-style-type: none"> An inspection may be required in conjunction with the replacement of the component in question
Observe the maintenance intervals	<ul style="list-style-type: none"> All information is based on average machine usage In the case of heavy usage (e.g. contract work), shorten the maintenance intervals accordingly Shorter maintenance intervals may also be required under extreme working conditions (e.g. heavy dust generation)

Maintenance

Screwed connections

Retighten screws

All bolts must be retightened:

- After the first hours of operation
- According to the frequency of use
- But at least once a season

General tightening torques

Tighten all screwed connections in accordance with the information in the table. If different tightening torques are necessary, they are specified in the chapter »Maintenance«. The minimum quality of the bolts is 8.8.

Bolt size	Quality of the bolts		
	„8.8“	„10.9“	„12.9“
	Tightening torques in Nm		
M6	9.9	14	17
M8	24	34	41
M10	48	68	81
M12	85	120	145
M16	210	290	350
M20	425	610	710
M24	730	1050	1220

Maintenance intervals and setting work

The information relates to average usage under the machine's normal operating conditions. Maintenance intervals are shorter for heavy usage, such as with hire companies, or for extreme operating conditions such as very dusty environments.

	After the first hours of operation	Once daily	After 30 hours of operation	After 75 hours of operation	Once per season	As required	In case of wear	grease / oil / lubricate	Check	Replacement	Cleaning
General											
Retighten all screws	•					•					
Visual inspection	•	•									
Bearing		•				•		•			
Pivots		•							•		
Hydraulics											
Hydraulic hoses every 6 years										•	
Hydraulic hoses in general						•	•			•	
Hydraulic cylinder			•			•		•	•		
Tools											
Fastenings on the rotor		•							•		
Condition, wear		•							•		•
Other											
Position of rotor		•						•			
Roller bearing		•						•			
Shafts and pins			•					•			
PTO shaft protective cover		•				•		•	•	•	•
Gearbox oil		•			•				•		•

Lubricating work


Lubricate bearings

The bearings must be lubricated regularly. Lubricate only with 1 - 2 strokes with the grease gun:

- According to the maintenance chart
- After heavy use
- But at least once a season

Bearings that require no maintenance must not be lubricated.

Overview of lubrication points

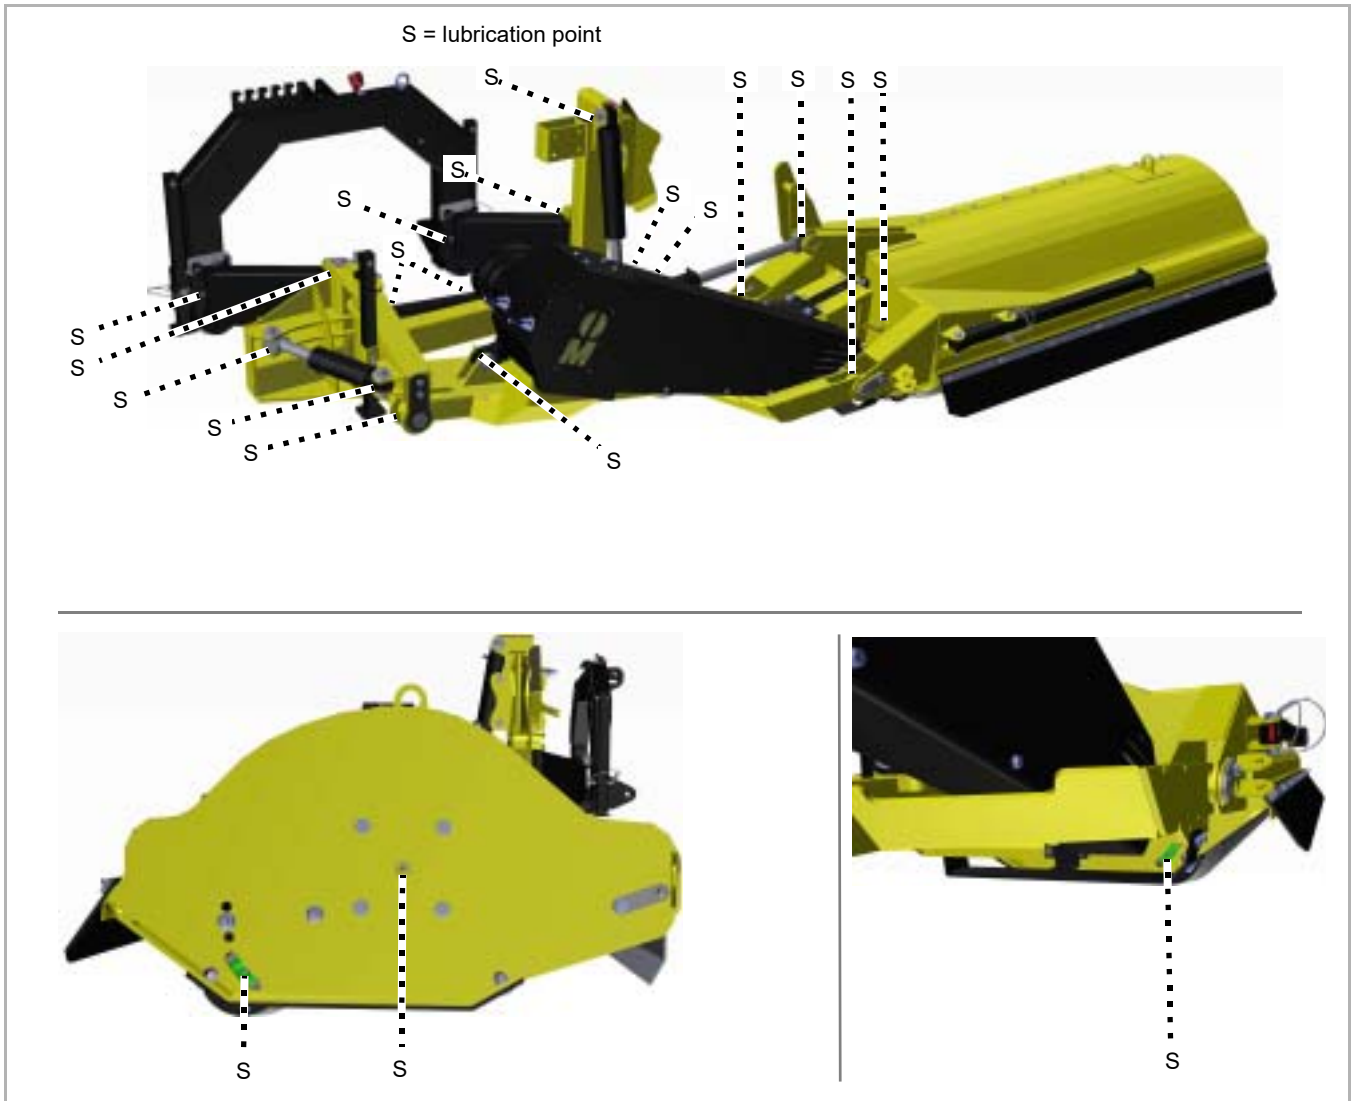

Other lubrication points

The following applies:

- In addition to the lubrication points shown in this operating manual, your machine may have other lubrication points
- As a rule, lubrication points are located at pivots or bearings. Therefore, inspect your entire machine for any such additional lubrication points.



The location of the lubricating nipple is usually shown on one component as an example. If multiple components of this kind exist, the lubricating nipples have to be lubricated at each of these components.

Maintenance

PTO shaft


The PTO shafts are heavily stressed. This means that regular maintenance is decisive for the PTO shafts' service life. Only the most important work is shown here.

Full maintenance work on the PTO shaft:

→ PTO shaft operating manual

Checking

Daily

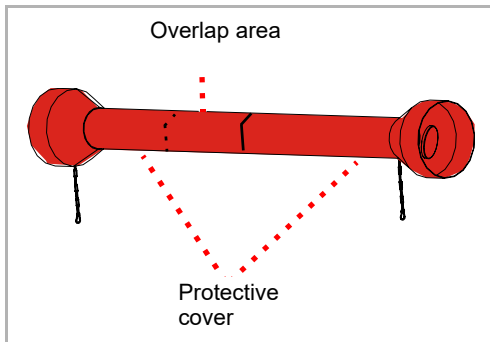

- ▶ Check the PTO shaft for contamination and clean if required. Dust in conjunction with oil and grease results in increased wear

If the PTO shaft is heavily contaminated:


- ▶ Clean PTO shaft
 - ▶ Grease the interior of the overlap area of the protective cover
- PTO shaft operating manual

- ▶ Check protective cover for damage

If the protective cover is damaged:

- ▶ Replace protective cover

→ PTO shaft operating manual

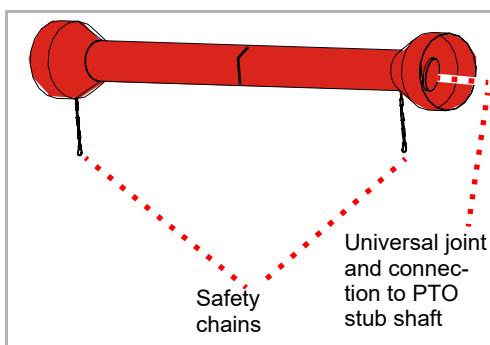

- ▶ Check presence and correct function of safety chains

If the safety chains are not present or are heavily worn:

- ▶ Replace the safety chains

→ PTO shaft operating manual

- ▶ Check the PTO shaft for wear in the universal joints and at the connection to the PTO stub shaft


If the universal joints are heavily worn:

- ▶ Replace the universal joints

→ PTO shaft operating manual

Lubrication

Every 50 hours of operation

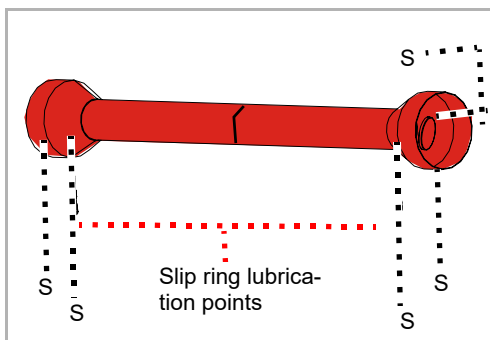

- ▶ Lubricate in the universal joint with 1 - 2 strokes of the grease gun.
- ▶ Lubricate on the slip rings with 1 - 2 pumps of the grease gun

For wide-angle PTO shafts:

The wide-angle joint contains a lubricant reserve which must be filled with 400-500 g [14-17 OZ] of grease.

- ▶ Lubricate with at least 5-6 pumps of the grease gun

→ PTO shaft operating manual


Gearbox oil

The gearbox oil must conform to the specification.

→ Chapter »Familiarising yourself with the machine«, section »Technical specifications«, page 24


Check

Twice per season

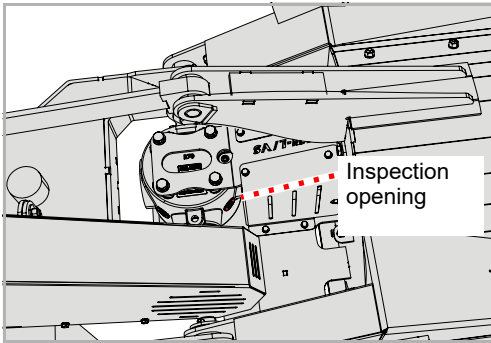

- ▶ Fold out the machine into its work position
- ▶ Loosen the screw on the inspection opening with an Allan key and remove the screw
- ▶ Check the oil level. The oil level must reach the lower edge of the inspection opening.
- ▶ Retighten the screw at the inspection opening


Refilling

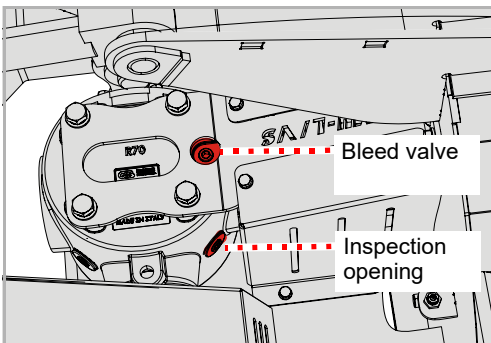


- ▶ Loosen the screw on the inspection opening with an Allan key and remove the screw
- ▶ Unscrew the bleed valve
- ▶ Use a funnel to fill with gear oil of the appropriate specification until the oil level reaches the lower edge of the inspection opening
- ▶ Retighten the screw at the inspection opening
- ▶ Screw the bleed valve back in

Replacement

1x per season

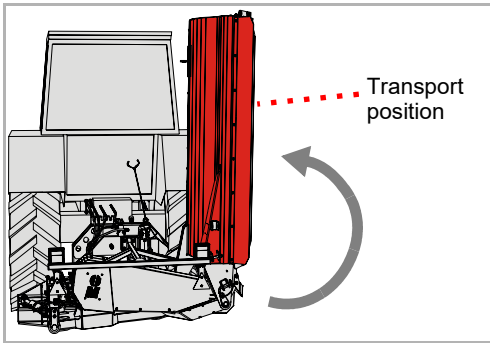

- ▶ Using the tractor's control device, fold the machine into the transport position

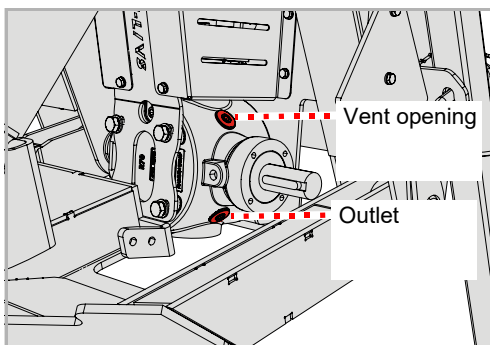

- ▶ Place a collection container under the outlet for the waste oil
 - ▶ Use an Allan key to loosen and remove the bolt on the vent opening
 - ▶ Loosen the screw on the outlet with an Allan key and remove the screw
 - ▶ Allow the oil to drain out fully
 - ▶ Replace the screw at the outlet
 - ▶ Using the tractor's control device, move the machine into its work position
 - ▶ Refill with new gear oil
- Section »Refilling«

Tools

As required

The tools must be replaced if they:

- Are damaged
- Are heavily worn
- The bore on the tool is worn
- The fastening screws or the fastening nuts are worn

It is important that the rotor runs without unbalance. Therefore:

- Always replace tools with the same type
- Always replace tools opposite each other at the same time
- In case of wear it is best to replace the entire set of tools




Secure the machine

Work can only be carried out on a machine secured against rolling away and dropping. To prevent dropping, for example, permitted and correctly dimensioned support legs can be used.

If the machine is not secured against rolling away and dropping, serious or fatal accidents could result.

New tools – new nuts and bolts

When replacing the tools, the nuts and bolts must also be replaced. *If the nuts and bolts are not replaced, the worn bolts may break. Tools may become detached during work and be flung out. Even persons outside of the hazard area could be seriously injured or killed.*


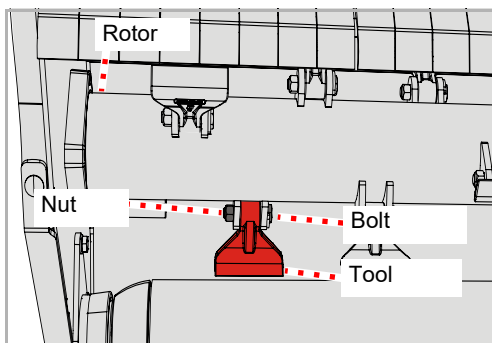


- ▶ Secure the machine against rolling away and dropping
- ▶ Loosen the nuts and remove the bolts
- ▶ Remove old tool
- ▶ Replace new tool in the same manner. If washers were present, insert new washers. Pay attention to the fit of the washers.
- ▶ Fit a new screw and secure with a new nut

V-belt

As required

Checking

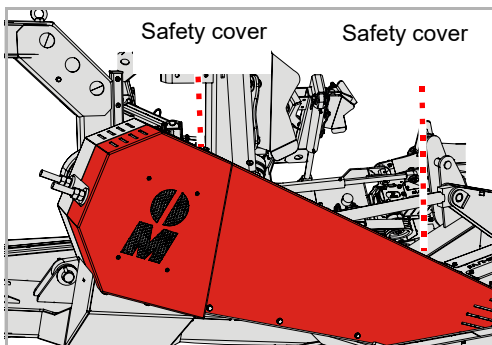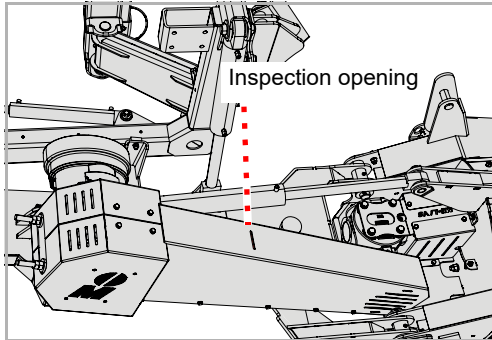


If the V-belt is not sufficiently tensioned, it must be retensioned. If there are any tears or the V-belt is damaged it must be replaced.

An inspection opening is fitted on the machine.

- ▶ Check V-belt tensioning. The V-belt must not be able to push through more than 10 mm under a load of 6 kg.

- ▶ Remove the safety cover
- ▶ Inspect the V-belt for damage

Tensioning

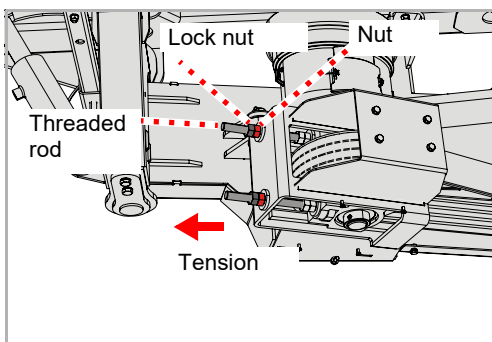


The tension jack is tensioned using two threaded rods.

- ▶ Loosen the lock nuts
- ▶ Use the nut to tension the V-belt as required
- ▶ Check V-belt tensioning

Replacement


If there are any tears or other damage on the V-belt, it must be replaced.

- ▶ Remove the safety cover

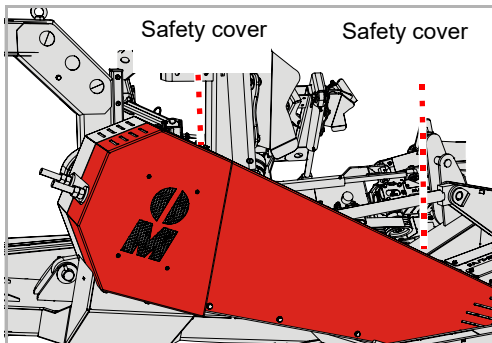


The V-belt consists of several narrow V-belts.

- ▶ Loosen the lock nuts
- ▶ Use the nut to tension the V-belt as required

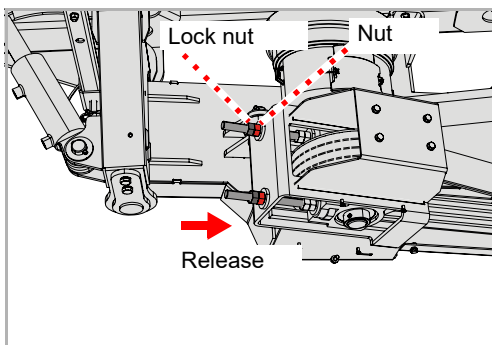

- ▶ Remove old V-belt
 - ▶ Fit new V-belt
 - ▶ Check that the V-belt is positioned correctly
 - ▶ Tension the V-belt
- Section »Tensioning«, page 58

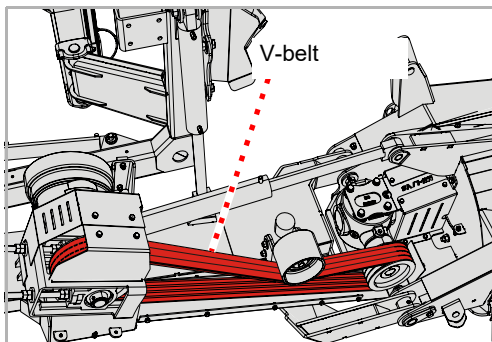

Runners

As required




The runners protect the machine from direct contact with the ground. If they are not replaced in good time, the housing of the machine will be damaged.

Secure the machine

Work can only be carried out on a machine secured against rolling away and dropping. To prevent dropping, for example, permitted and correctly dimensioned support legs can be used.

If the machine is not secured against rolling away and lowering, serious or fatal accidents could result.

Right runner

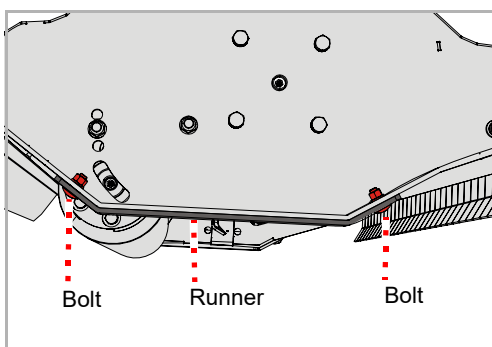


- ▶ Undo nuts, remove screws and washers.
- ▶ Remove old runner
- ▶ Fit new runner
- ▶ Fit new screws and washers
- ▶ Secure screws with new nuts

If the runner also needs to be replaced on the opposite side:

- ▶ Replace the runner on the opposite side as well

Left runner

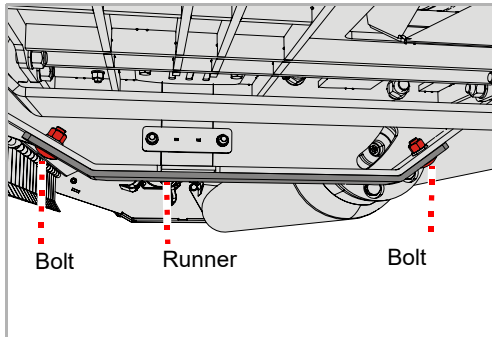


- ▶ Undo nuts, remove screws and washers.
- ▶ Remove old runner
- ▶ Fit new runner
- ▶ Fit new screws and washers
- ▶ Secure screws with new nuts

If the runner also needs to be replaced on the opposite side:

- ▶ Replace the runner on the opposite side as well


Lighting equipment

Integrated lighting equipment is available for transporting the machine on the road.

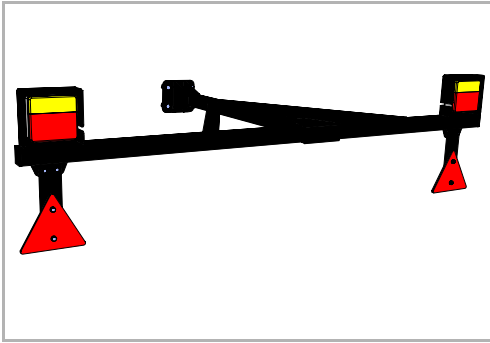


Wear insert

A metal insert protects the housing from wear.

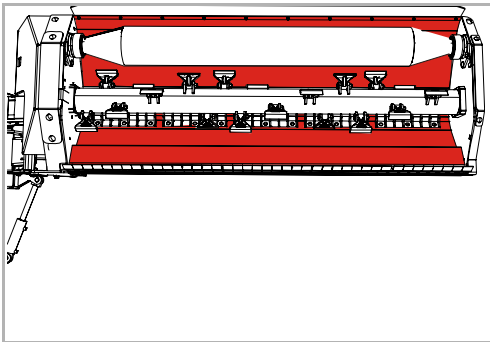


Counter cutter

A second counter-cutter makes work easier if the material to be mulched in the field is very long. They guide the material towards the tools, thereby making better cutting possible.

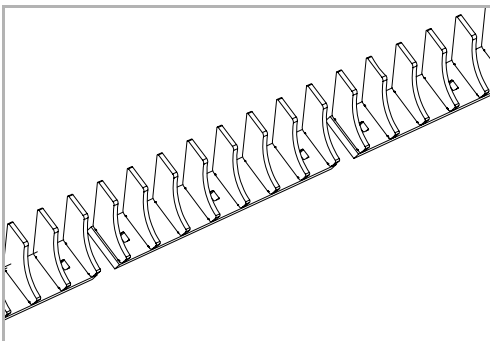


Additional equipment

Wide-angle PTO shaft

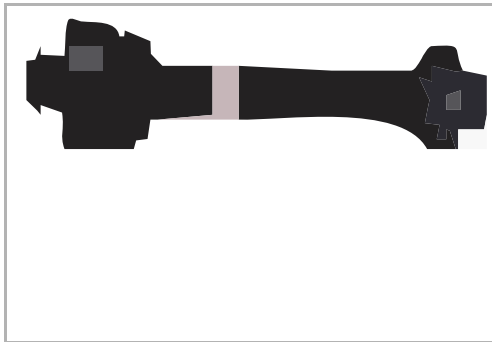

A wide-angle PTO shaft transfers the power from the PTO stub shaft evenly to the machine. The service life of the PTO shaft is longer and the machine drive is impacted less because of the smooth running.

Operating hours counter

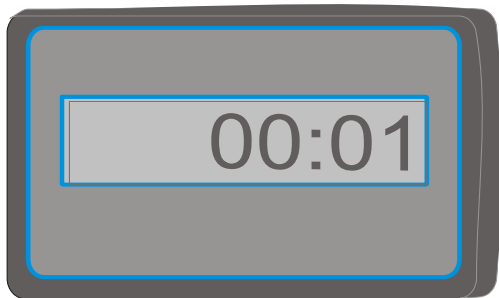

An electronic operating hours counter displays the actual operating duration. This means that data can be recorded precisely and used, for example, for calculations.

Faults can often be eliminated quickly and easily. In the event of hydraulic problems, first check:

- Are the hydraulic hoses properly connected?
- Is the control valve at the tractor defect?
If so, contact your dealer.
- Is the hydraulic pump of the tractor defective?
If so, contact your dealer.

Before calling Customer Service, refer to the table below to check whether the fault is one you can eliminate yourself.

Fault	Cause	Remedy
Strong vibrations and high noise development	Tools are worn	Replace the tools
	One or more tools are missing	Replace tools
	Tools are damaged	Replace the tools
	Bearings for the rotor are worn	Have the bearings replaced
	Foreign bodies, such as wire, are wound around the rotor	Remove foreign bodies
	Tools have become loose	Tighten nuts on screws
	Speed of rotation of the PTO stub shaft is not set correctly	Set the correct speed of rotation on the PTO stub shaft
	Rotor not correctly counterbalanced	Check balancing and rebalance the rotor if necessary
Tools wearing quickly	The tools are working too deeply	Set correct working depth
Material cut too rough and cut material not distributed evenly	Drive speed too high	Reduce the drive speed
	The tools are working too deeply	Set correct working depth
	The tools are working too high	Set correct working depth
	V-belt worn	Replace V-belt set
	V-belt not correctly tensioned	Check V-belt tension and retension if necessary
	Speed of rotation of the tractor PTO stub shaft is too low	Increase the rpm
	Tools are worn	Replace the tools
	The machine is not standing parallel to the ground	Adjust the machine correctly
Rotor does not turn	Rotor is blocked by a foreign body	Remove foreign bodies
	Free running state in the PTO shaft or on the gear box is incorrectly assembled	Have the free running state correctly assembled

Fault elimination

Fault	Cause	Remedy
PTO shaft rotating, rotor is not	V-belt torn	Replace the V-belt
Unusual noises from the PTO shaft	Insufficient lubrication	Lubricate the PTO shaft
Gear box overheating	Incorrect oil specification	Change oil and select oil with correct specification
	Oil too old	Change oil
	Oil level too low	Fill the oil to the lower edge of the inspection opening
	Machine overload	Maintain rpm in correct region, adjust driving speed to suit the work, maintain performance area (avoid excessively heavy growth or excessively thick branches)
High wear on V-belts V-belts running hot Power transmission not optimal	The tools are working too deeply and touching the ground	Set correct working depth
	Pulleys not aligned in parallel	Have pulleys correctly aligned
	V-belt is worn	Replace the V-belt
	V-belt is not correctly tensioned	Check the tension jack
Loss of oil at gear box or at centre bearing	Sealing rings worn or damaged	Have sealing rings replaced
Drive elements broken	Machine was started up abruptly or is blocked by foreign bodies	Have defective drive element replaced. Start the machine up slowly.

When the service life of your machine is over, it must be disposed of properly. Please observe currently valid disposal regulations.

Metal parts

All metal machine components can be sent for metal recycling.

Plastic parts

All plastic parts are marked and can be recycled.


Oil

Collect fluid from the hydraulic system in a suitable container and dispose of at a used oil collection facility.

EC Declaration of Conformity

EC Directive
2006/42/EC

Müthing GmbH & Co KG Soest
Am Silberg 23
D-59494 Soest, Germany

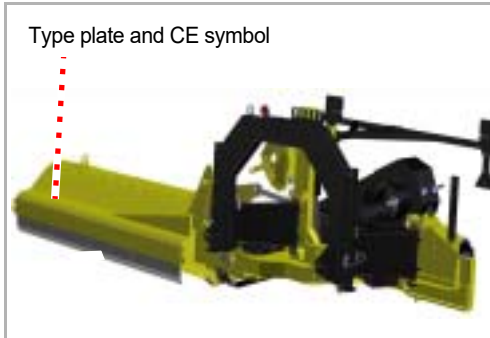

assumes sole responsibility for declaring that the following product complies with EC Directive 2006/42/EC:

MU-L/VS and additional equipment

Soest, 19.05.2016

Christian Jungmann
CEO and authorised person for compiling technical documentation

Copy of the type plate/Enter the machine number

Machine Type:	
Working Width:	
Serial Number:	
Year of Construction:	

A		M	
Additional equipment	61	Machine	
Counter cutter	61	Storing	46
Operating hours counter	62	Maintenance	
Warning signs with lighting device	61	General information	48
Assemblies	23	Maintenance intervals	51
		Overview of lubrication points	53
		Safety	47
C		P	
Care	42	Parking	43
Centre of gravity	15	Pictograms	9
Cleaning	42	Protective measures	
Connecting		Oils or lubricants	48
Electrics	30		
Hydraulics	30		
Coupling	27		
		R	
D		Range of application	21
Declaration of Conformity	66	Hammer flail	21
Dimension G	15	M shackle blade	21
Direction information	13	Triple Y-blade	21
		S	
E		Safety	10
Electrics		Agricultural training	13
Connecting	30	Altered driving and braking performance	17
Employer	8	Axle loads	15
		Care and maintenance intervals	19
F		Care and maintenance work	19
Fault	63	Centre of gravity	15
Features	22	Check the screwed connections	20
		Cleaning	20
H		Coupling	14
Hydraulics		Minimum ballast	15
Connecting	30	Proper use	21
		Putting the machine into operation	17
L		Riding on the machine	17
labels, see warning signs		Total weight	15
Lubricate bearings	52	Tyre load-bearing capacity	15
		Uncoupling the machine	19
		Warning signs	10
		Welding work	20
		Scope of delivery	26
		Screwed connections	50
		Setting down the machine in a secure position	43
		Symbols	9

T

Target group	8
Task	38
Technical specifications	24
Tightening torques	
General	50
Training	8
Transport without coupling	34

W

Warning signs	10, 34
Meaning	11
Work position	35
Working depth	31

For your notes

Index

For your notes

For your notes